

Diagnosis - Function Test (Retractable Trunk Lid Grip)

Preparation for Test

1. Check fuse F4-3 and fuse F4-11.
2. Battery voltage 11 – 14 V.
3. Central locking system **unlocked**.

| Test step/Test scope | Test condition | Nominal value | Possible cause/Remedy ¹⁾ |
|---|-----------------|-------------------------------------|--|
| ⇒ 1.0 Extend retractable trunk lid grip | Open trunk lid. | Retractable trunk lid grip extends. | <p>Retractable trunk lid grip does not extend and pump motor in PSE control module (A37, A37/1) does not run.</p> <p>23 PSE ⇒ 1.0, 23 ⇒ 1.0.</p> <p>Retractable trunk lid grip does not extend even though pump motor in PSE control module (A37, A37/1) runs.</p> <p>32 PSE ⇒ 5.0, 32 ⇒ 1.0, 3.0, Check for mechanical obstruction.</p> |

¹⁾ Observe Preparation for Test, see 22.

Diagnosis - Function Test (Retractable Trunk Lid Grip)

| Test step/Test scope | Test condition | Nominal value | Possible cause/Remedy ¹⁾ |
|--|------------------|--|--|
| ⇒ 2.0 Retract retractable trunk lid grip | Close trunk lid. | Trunk lid grip retracts in approx. 1 second. | <p>Retractable trunk lid grip does not extend and pump motor in PSE control module (A37, A37/1) does not run. 23 PSE ⇒ 1.0, 23 ⇒ 1.0.</p> <p>Retractable trunk lid grip does not extend even though pump motor in PSE control module (A37, A37/1) runs. 32 PSE ⇒ 6.0, 32 ⇒ 2.0, 4.0.</p> |

1) Observe Preparation for Test, see 22.