
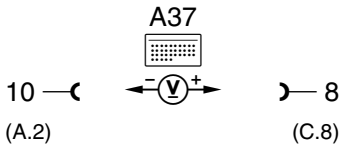
 

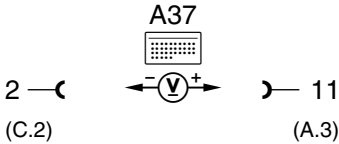


Electrical Test Program – Test

⇒		Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
1.0		Remote trunk release		Trunk lid closed. Trunk lid not locked with mechanical key. Remote trunk release switch (S15): Press switch:	Trunk lid opens.	Wiring, ⇒ 1.1, ⇒ 2.0, 23 PSE ⇒ 1.0, 32 ⇒ 1.0, 32 PSE ⇒ 2.0, PSE control module (A37).
1.1		Remote trunk release switch (S15)	 <p style="text-align: center;">A37</p> <p style="text-align: center;">10 ← (A.2) ← V → → 8 (C.8)</p>	Disconnect PSE control module (A37) from  . S15: Rest position S15: Hold pressed	< 1 V 11 – 14 V	Wiring, S15

Electrical Test Program – Test

⇒		Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
2.0		Activate RTR control valve (Y65/3) (CL)		S15: Rest position S15: Hold pressed	< 1 V 11 – 14 V, as long as PSE pump runs (use fluke 83, 88 to measure voltage).	Wiring, ⇒ 1.1, 23 PSE ⇒ 1.0, PSE control module (A37).