

Diagnosis – Function Test (Retractable Rear Head Restraint)

Preparation for Test:

1. Check fuses F1–14, F1–22, F4–3, F4–5 ok,
2. Battery voltage 11 – 14 V.
3. Ignition: **ON**
4. Retractable rear head restraints extended up.

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Retract rear head restraints.	Press RHR unlocking switch (S6/1s3).	Both retracable rear head restraints retract.	<p>Retractable rear head restraints do not retract and pump motor in PSE control module (A37) does not run.</p> <p>23 ⇒ 1.0, 23 PSE/CL ⇒ 1.0, 2.1 23 ⇒ 1.0–3.0</p> <p>Retractable rear head restraints do not retract even though pump motor in PSE control module (A37) runs.</p> <p>32 ⇒ 1.0, 33 PSE ⇒ 4.0, Mechanical fault in RHR.</p>

¹⁾ Observe Preparation for Test, see 22.