

Diagnosis – Function Test (Remote Trunk Release)

Preparation for Test:

1. Check fuses F1–14, F1–22, F4–3, F4–5 ok,
2. Battery voltage 11 – 14 V.
3. Vehicle is unlocked via IR transmitter.
4. Rear trunk lid is closed.
5. Trunk lid has not been locked separately (using mechanical key).

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Open trunk lid via remote trunk lid release switch (S15).	Press remote trunk lid release switch (S15).	Trunk lid opens.	<p>Trunk lid does not open and pump motor in PSE control module (A37) does not run. 23 ⇒ 1.0</p> <p>Trunk lid does not open even though pump motor in PSE control module (A37) runs. 32 ⇒ 1.0, 32 PSE ⇒ 2.0, Mechanical fault in trunk lid lock.</p>

1) Observe Preparation for Test, see 22.