
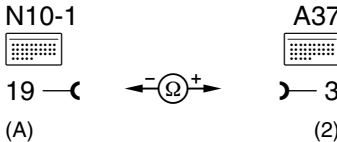


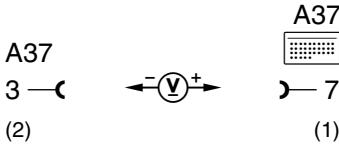


#### Electrical Test Program – Test

⇒		Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
1.0	B1124	<b>Remote trunk release</b>		Trunk lid closed. Trunk lid not locked with mechanical key. Remote trunk release switch (S15): <b>Press switch:</b>	Trunk lid opens.	Wiring, ⇒ 1.1, ⇒ 2.0, 23 PSE ⇒ 1.0–8.0, 2.1 23 1.0–3.0, 32 ⇒ 1.0, 32 PSE ⇒ 2.0, Combination control module (N10-1), PSE control module (A37).
1.1		Remote trunk release switch (S15)		Disconnect combination control module (N10-1) from  .  S15: <b>Rest position</b>  S15: <b>Hold pressed</b>	>20 kΩ         < 1 Ω	Wiring, S15

#### Electrical Test Program – Test

⇒		Test scope	Test connection	Test condition	Nominal value	Possible cause/Remedy
2.0		<b>Activate RTR control valve (Y65/3) (CL)</b>		Remote trunk release switch (S15): <b>Rest position</b>  S15: <b>Hold pressed</b>	< 1 V  11 – 14 V, as long as PSE pump runs, (use fluke 83, 88 to measure voltage).	Wiring, ⇒ 1.1, 23 PSE ⇒ 1.0–8.0, 2.0 23 1.0–3.0, PSE control module (A37).