

Diagnosis – Function Test (Retractable Rear Head Restraint)

Preparation for Test:

1. Retractable rear head restraints extended up.
2. Ignition: **ON**
3. Battery voltage 11 – 14 V.
4. Check fuses ok.
5. Voltage to control modules and CAN data lines ok.

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Retract rear head restraints.	Press RHR unlocking switch (S6/1s3).	Both retractable rear head restraints retract.	Retractable rear head restraints do not retract and pump motor in PSE control module (A37) does not run. PSE version coding incorrect, Wiring, PSE (A37). Retractable rear head restraints do not retract even though pump motor in PSE control module (A37) runs. Mechanical fault in RHR, 23 PSE/RHR ⇒ 1.0, 32 PSE/RHR ⇒ 1.0, 32 PSE ⇒ 8.0

¹⁾ Observe Preparation for Test, see 22.