

Pneumatic Test Program – Component Locations (RHR)

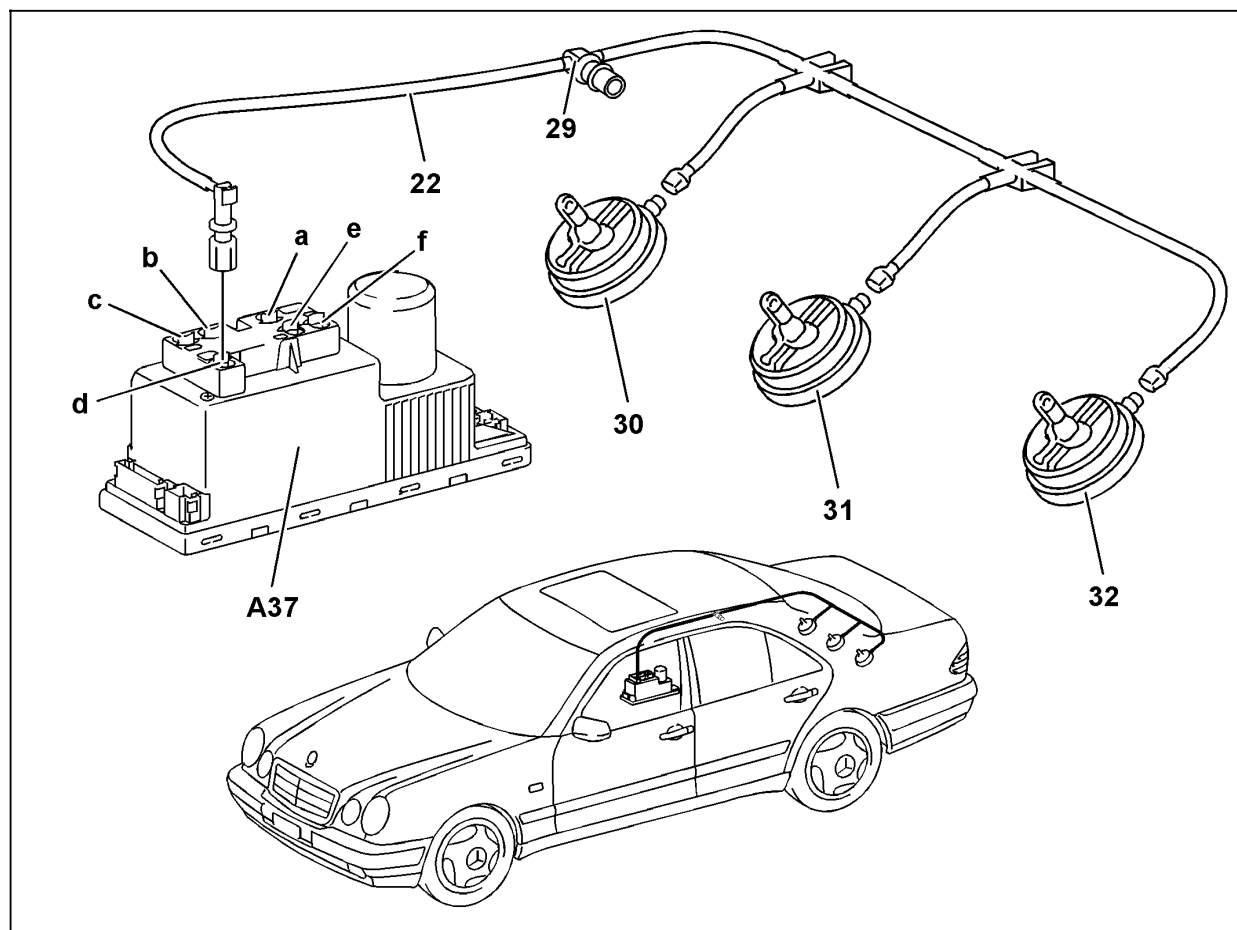


Figure 1

- A37 PSE control module, combined functions
- a Pneumatic connection, passenger/rear doors
- b Pneumatic connection, driver-side door
- c Pneumatic connection, fuel tank filler flap
- d Pneumatic connection, RTR/RHR
- e Pneumatic connection, OSB
- f Pneumatic connection, MVA
- 22 Pneumatic line, RHR
- 29 Pneumatic line, T-connector
- 30 Pneumatic actuator RHR, right side
- 31 Pneumatic actuator RHR, center
- 32 Pneumatic actuator RHR, left side

P80.20-0373-06