

### Diagnosis – Recalling Actual values with HHT

The following tests and activations are possible via the **Hand-Held Tester**

#### Preparation for Test

1. Fuses ok,
2. Battery voltage 11 – 14 V.
3. Ignition: **ON**
4. Connect the Hand-Held Tester (HHT) to X11/4, according to diagram, see section 0.

#### CAUTION!


##### Model 210

Erasing the Combination Control Module (N10-1) DTC memory, will also erase the DTC memory for the Convenience Feature (CF) and Mirror, steering column adjustment, heated mirrors (MSC).

##### Model 170


Erasing the Combination Control Module (N10-3) DTC memory, will also erase the DTC memory for the Convenience Feature (CF) and Retractable Hard Top (RHT).

#### Special Tools

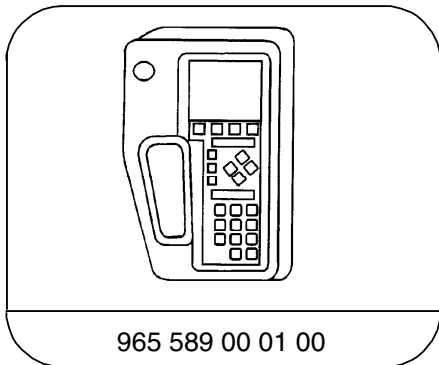

965 589 00 01 00


Hand-Held-Tester

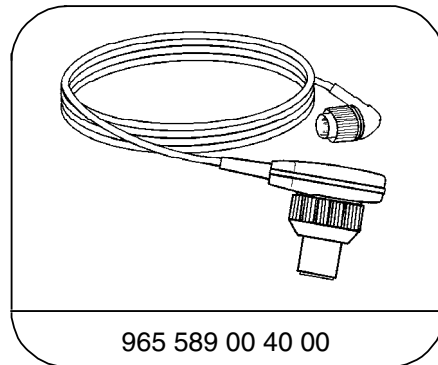

965 589 00 40 00

Test cable

### Diagnosis – Recalling Actual

Actual value 	Possible cause	Test step/Remedy <sup>1)</sup>
01	Circuit 15R	23 ⇒ 3.0
02	Circuit 15	23 ⇒ 2.0
03	Circuit 49	23 ⇒ 26.0
04	Circuit 49a	23 ⇒ 27.0
05	Rear window defroster switch	23 ⇒ 22.0
06	Rear window heating	23 ⇒ 22.0
07	Low voltage	–
08	Over voltage	–
09	Interior lamp	23 ⇒ 18.0
10	Entrance/exit lamp	23 ⇒ 17.0
11	Intermittent windshield wiper	23 ⇒ 9.0
12	Windshield wiper stage 1	23 ⇒ 9.0
13	Windshield wiper stage 2	23 ⇒ 9.0
14	Circuit 86, windshield wiper wash	23 ⇒ 10.0
15	Circuit 31b, windshield wiper	23 ⇒ 15.0
16	Windshield wiper locked up	Visual inspection of wiper motor (M6/1).

<sup>1)</sup> Observe Preparation for Test, see 22.