### Model 129 with ME-SFI

#### Note:

Mechanical lock cylinders are located on left door and trunk lid only.


A mechanical lock cylinder is not located on the right door.

### Figure 1

A26/1

A26/2	Right front door IR receiver
A26/3	Trunk lid IR receiver
L11	Transponder coil (on ignition/starter switch)
N3/10	Engine control module (ME-SFI)
N3/11	Left engine control module (ME-SFI)
N3/12	Right engine control module (ME-SFI)
N54	RCL control module
N54/1	IR DAS control module
	(behind instrument cluster)
1	IR transmitter with transponder

Left front door IR receiver

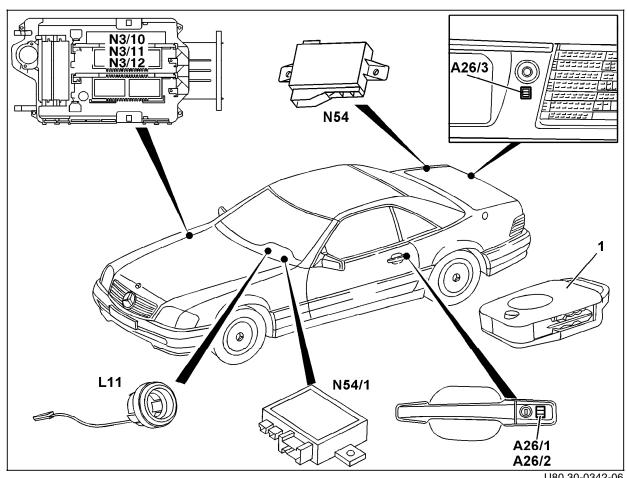

U80.30-0342-06

### Model 140 with ME-SFI

### Note:


Mechanical lock cylinders are located on left front door and trunk lid only.

A mechanical lock cylinder is not located on the right front door.

## Figure 2

A26/1	Left front door IR receiver
A26/2	Right front door IR receiver
A26/3	Trunk lid IR receiver
L11	Transponder coil (on ignition/starter switch)
N3/10	Engine control module (ME-SFI)
N3/11	Left engine control module (ME-SFI)
N3/12	Right engine control module (ME-SFI)
N54	RCL control module
N54/1	IR DAS control module
	(behind instrument cluster)
1	IR transmitter with transponder

Laft framt alass ID vassinas

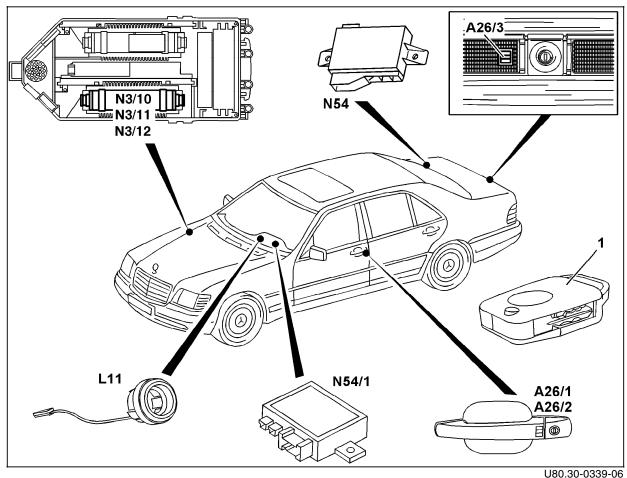

## Model 140 (coupé) with ME-SFI


### Note:

Mechanical lock cylinders are located on left door and trunk lid only.

A mechanical lock cylinder is not located on the right door.

## Figure 3

A26/1 Left front door IR receiver A26/2 Right front door IR receiver A26/3 Trunk lid IR receiver Transponder coil (on ignition/starter switch) L11 N3/10 Engine control module (ME-SFI) N3/11 Left engine control module (ME-SFI) N3/12 Right engine control module (ME-SFI) N54 RCL control module N54/1 IR DAS control module (behind instrument cluster) IR transmitter with transponder 1

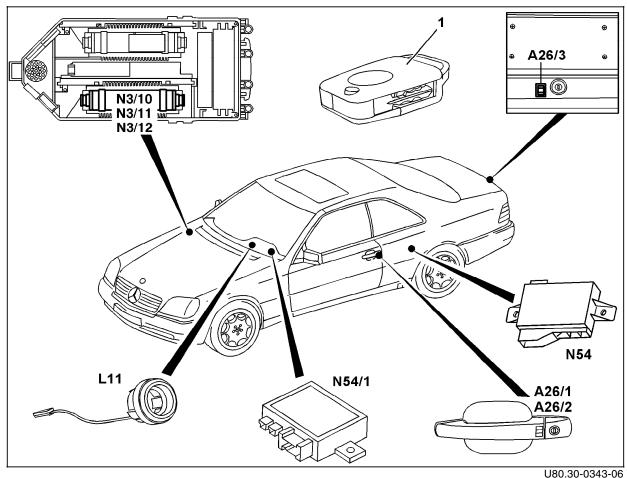

#### Model 202 with ME-SFI

#### Note:

Mechanical lock cylinders are located on right front door and trunk lid only.


A mechanical lock cylinder is not located on the left front door.

## Figure 4

A26/1

A26/3 Trunk lid IR receiver A26/7 RCL receiver (interior rear view mirror) Transponder coil (on ignition/starter switch) L11 Engine control module (ME-SFI) N3/10 N54 RCL control module IR DAS control module N54/1 (behind instrument cluster) 1 IR transmitter with transponder

Left front door IR receiver

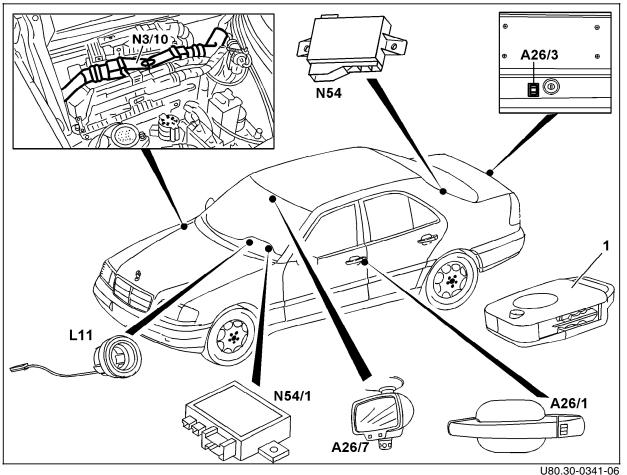

### Model 210 with ME-SFI

#### Note:

Mechanical lock cylinders are located on right front door and trunk lid only.

A mechanical lock cylinder is not located on the left front door.

## Figure 5

A26/1

A26/3 Trunk lid IR receiver A26/7 RCL receiver (interior rear view mirror) Transponder coil (on ignition/starter switch) L11 Engine control module (ME-SFI) N3/10 N54 RCL control module IR DAS control module N54/1 (behind instrument cluster) 1 IR transmitter with transponder

Left front door IR receiver

