


11.1 Cabriolet Soft Top (RST), Roll Bar (RB) (Manual Deployment)

Model 124

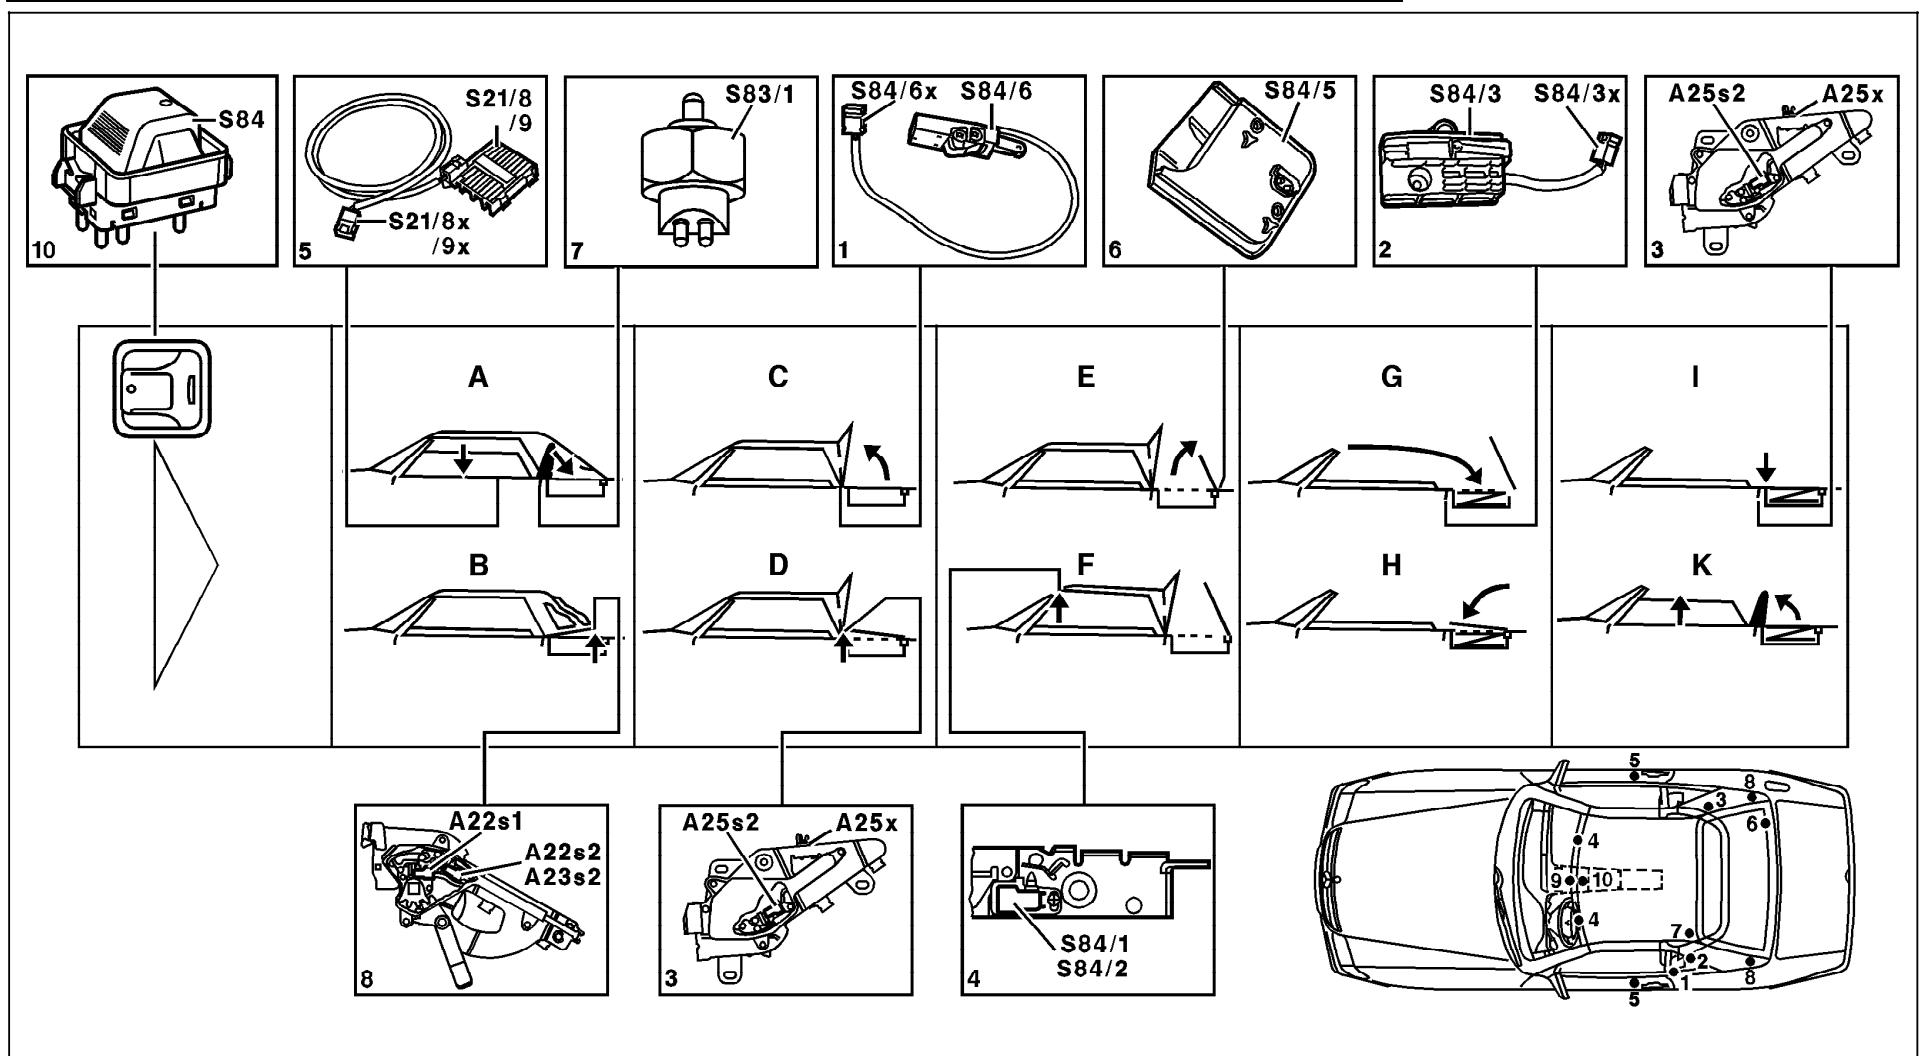

P77.39-0255-09

Diagnosis – Function Test


Soft top opening sequence

Figure 1

A25/1	Soft top compartment cover switch group
A25/1s1 (3)	Cover "closed" switch
A25/1s2 (3)	Cover "locked" switch
S83/5 (7)	RB "retracted" switch
S83/6 (8)	RB "extended" switch
S84 (10)	Power soft top switch
S84/1 (4)	Left front soft top "locked" switch
S84/2 (4)	Right front soft top "locked" switch
S84/3 (2)	Soft top "open" switch (soft top in storage compartment)
S84/4 (2)	Soft top "overhead" switch
S84/5 (6)	Soft top compartment "open" switch
S84/6 (1)	Soft top fabric bow "raised" switch
S84/7 (2)	Soft top fabric bow "down" switch
S84/8 (5)	Soft top fabric bow "locked" switch

11.1 Cabriolet Soft Top (RST), Roll Bar (RB) (Manual Deployment)

Model 124

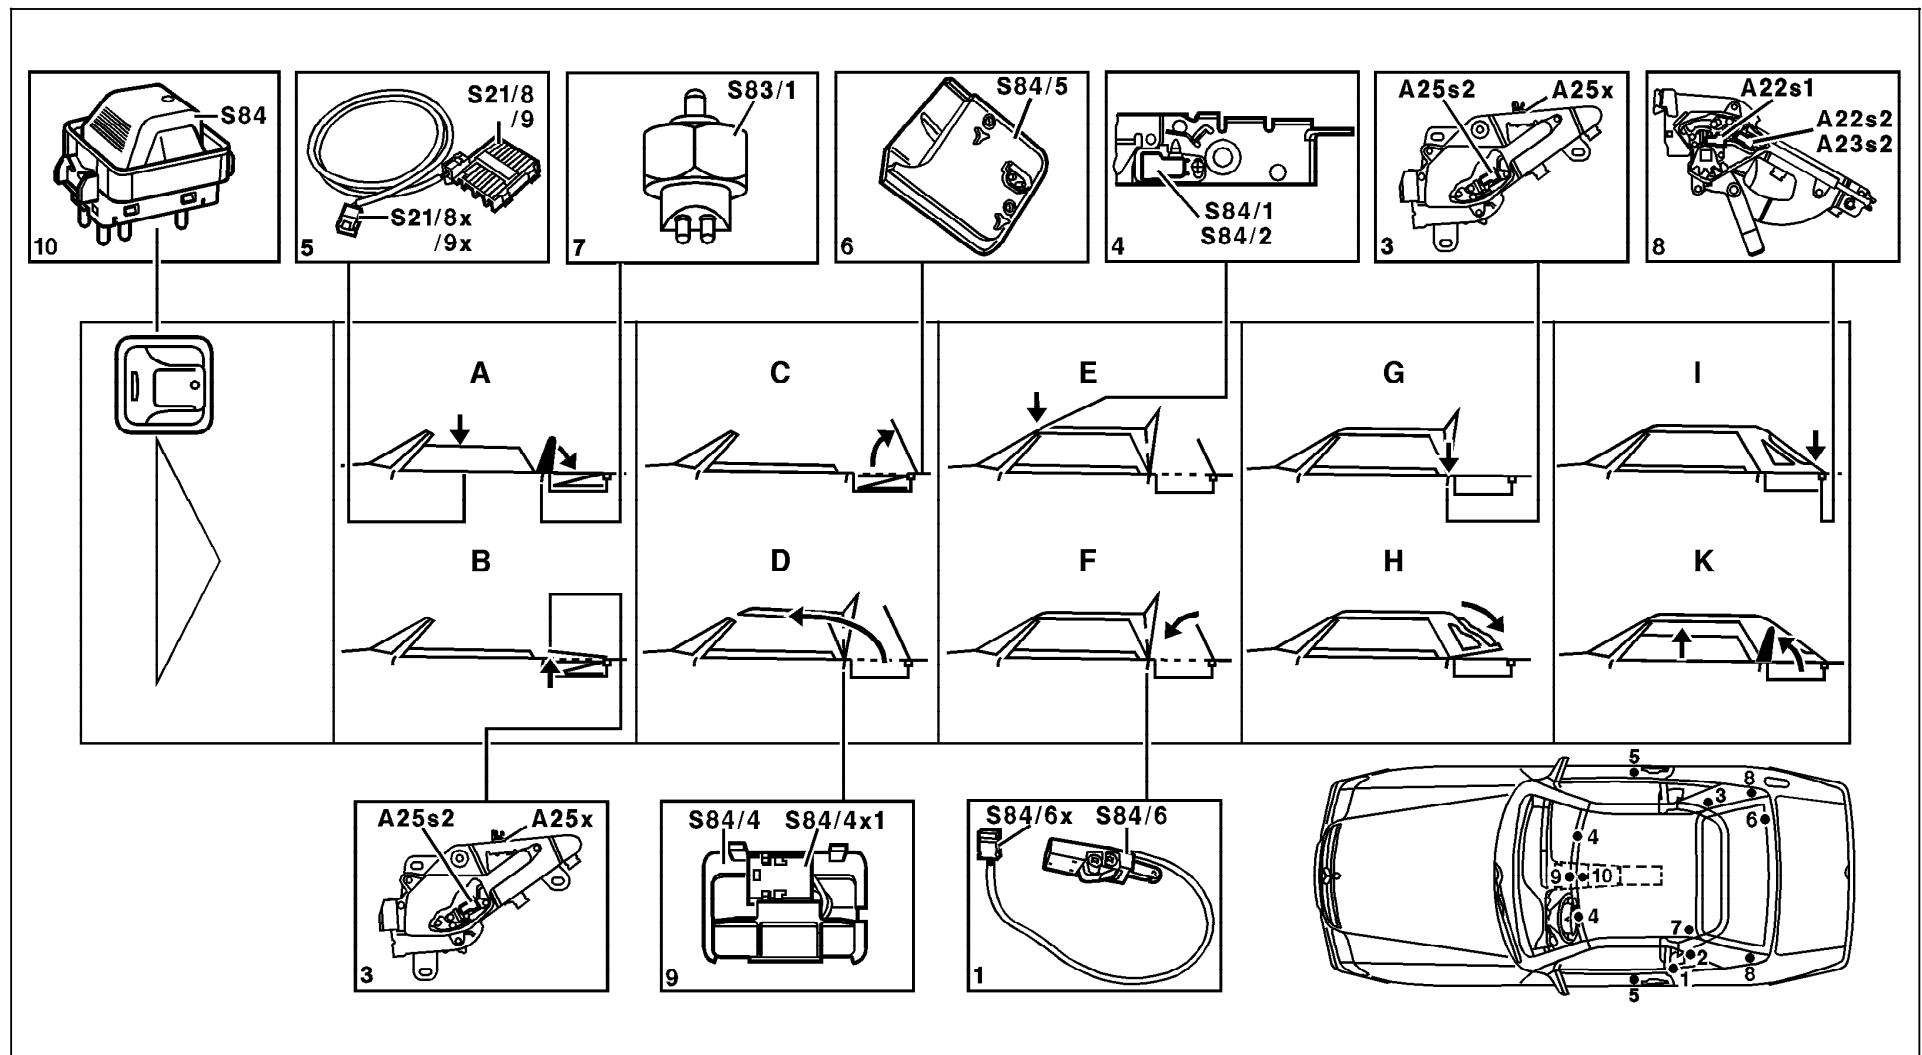

P77.39-0256-09

Diagnosis – Function Test

Soft top closing sequence

Figure 2

A25/1	Soft top compartment cover switch group
A25/1s1 (3)	Cover "closed" switch
A25/1s2 (3)	Cover "locked" switch
S83/5 (7)	RB "retracted" switch
S83/6 (8)	RB "extended" switch
S84 (10)	Power soft top switch
S84/1 (4)	Left front soft top "locked" switch
S84/2 (4)	Right front soft top "locked" switch
S84/3 (2)	Soft top "open" switch (soft top in storage compartment)
S84/4 (2)	Soft top "overhead" switch
S84/5 (6)	Soft top compartment "open" switch
S84/6 (1)	Soft top fabric bow "raised" switch
S84/7 (2)	Soft top fabric bow "down" switch
S84/8 (5)	Soft top fabric bow "locked" switch