


## Electrical Test Program – Component Connections

### Locations of Connectors

Figure 1

- A7/5x1 Hydraulic unit connector
- A22x1 Left soft top fabric bow switch group connector
- A23x1 Right soft top fabric bow switch group connector
- A24x1 Cover "locked" switch
- A25x1 Center soft top compartment cover switch group connector
- S21/8x1 Right front door "window down" limit switch connector
- S21/9x1 Left front door "window down" limit switch connector
- S84/1x1 Retractable hardtop switch connector
- S84/2sx1 Right front soft top "locked" switch connector
- S84/3x1 Soft top "open" switch connector (soft top in storage compartment)
- S84/4x1 Soft top "closed" switch connector
- S84/6x1 Soft top fabric bow "raised" switch connector
- X2/2 VSS connector (radio) (2-pole)
- X11/2 Power soft top test connector
- X18 Interior/taillamp harness connector (12-pole)
- X18/3 Interior/taillamp harness connector (8-pole)
- X23/1 Power top/front locks connector (3-pole)

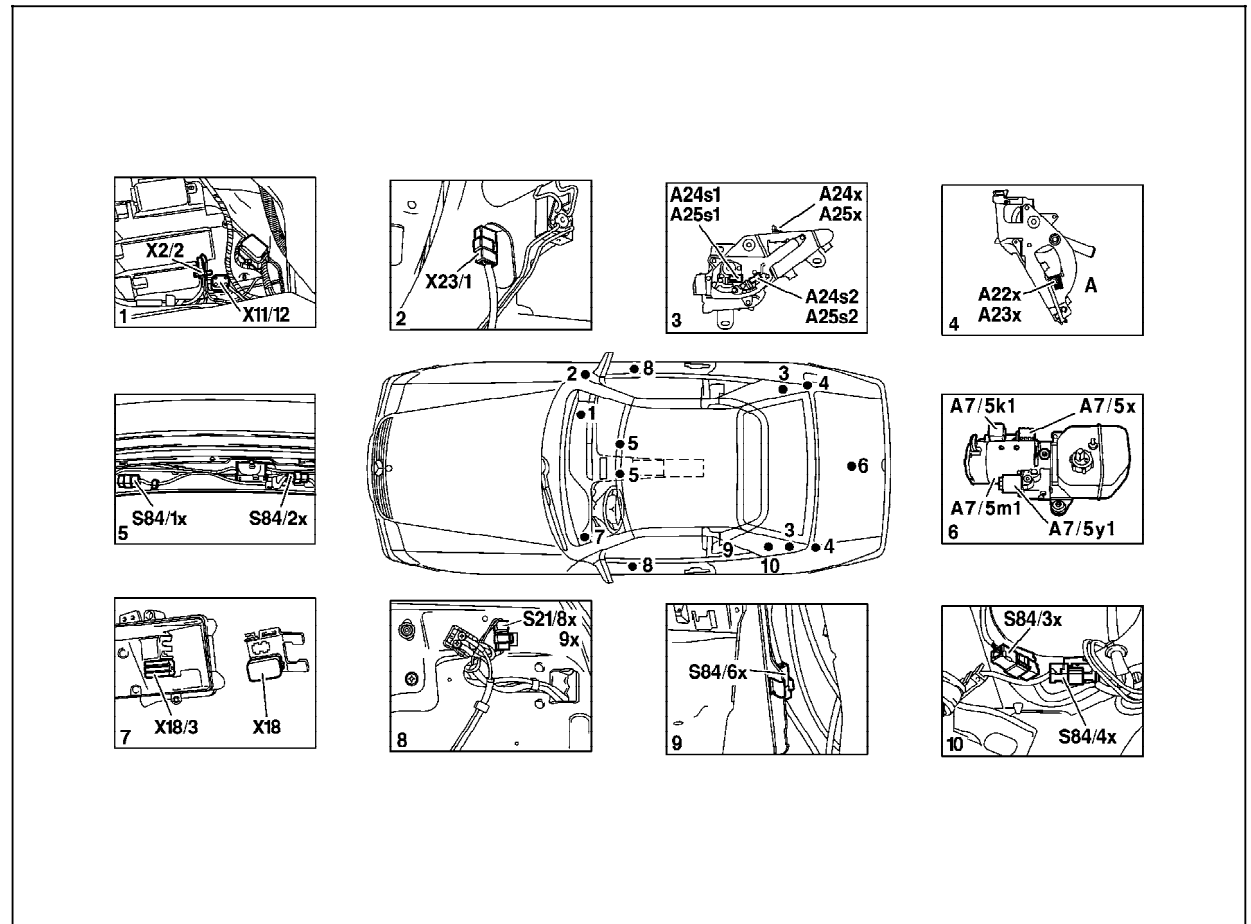

P77.39-0271-09