

Diagnosis – Actual Values/Activations

The following actual values and activations are possible via the Hand-Held Tester (HHT):

Preparation for Test:

1. Review 11, 20, 22

Actual values (functional condition)

- Various door lock switches including engine hood, trunk lid and glove box.
- Ignition system
- Service brake
- ATA anti-tow protection button
- ATA status indication



Menu driven via HHT

Four displays are possible:

✓, F, ON, OFF.

Contrary to DTC memory, actual values are updated continuously, even during diagnosis. This allows intermittent faults to be recognized by moving/shaking components, connectors or wiring harnesses.

Activation

The following components can be activated:

- Alarm horn (H3) **or** Alarm siren with auxiliary battery (H3/1)
- Headlamps or hazard flasher
- ATA status indication




Menu driven via HHT

Diagnosis – Actual Values/Activations

Preparation for Test:


1. Fuses ok,
2. Battery voltage 11 – 14 V.
3. Ignition: **ON**
4. Connect the Hand-Held Tester (HHT) to X11/4, according to diagram, see section 0.

Special Tools

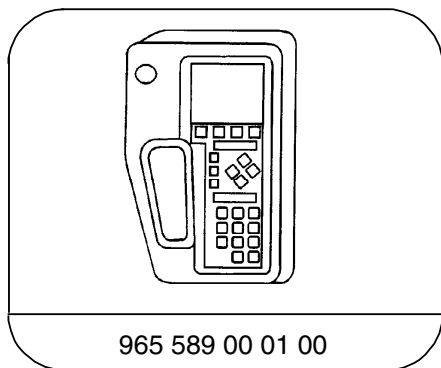

965 589 00 01 00

Hand-Held-Tester

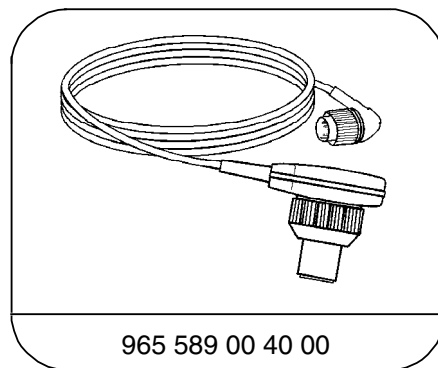

965 589 00 40 00

Test cable