

## Diagnosis - Function Test

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy <sup>1)</sup>
⇒ 1.0    Seat heating stage <b>I</b>	Ignition: <b>ON</b> Press front of left front seat heater switch (S51/1) or right front seat heater switch (S51/2) respectively.	Switch indicator lamp for stage <b>I</b> lights up. Seat cushion and backrest cushion warm up.	23⇒ 1.0, 2.0, 5.0, 7.0, 8.0  23⇒ 3.0, 4.0
⇒ 2.0    Seat heating stage <b>II</b>	Ignition: <b>ON</b> Press rear of left front seat heater switch (S51/1) or right front seat heater switch (S51/2) respectively.	Switch indicator lamp for stage <b>II</b> lights up. Seat cushion and backrest cushion warm up noticeable more than in stage <b>I</b>	23⇒ 1.0, 2.0, 5.0, 7.0, 8.0  23⇒ 3.0, 4.0
⇒ 3.0    Illumination of seat heater switches	Parking lamps switched on.	Switch symbol is illuminated.	23⇒ 6.0, 9.0

<sup>1)</sup> Observe Preparation for Test, see 22.