

Diagnosis – Function Test

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy <sup>1)</sup>
⇒ 1.0 Seat heating stage <b>I</b>	Ignition: <b>ON</b> Press front of left rear seat heater switch (S51/3) or right rear seat heater switch (S51/4).	1 LED in switch will illuminate. Seat cushion and backrest cushion will warm up.	23 ⇒ 1.0, 3.0, 4.0, 8.0, 9.0
⇒ 2.0 Seat heating stage <b>II</b>	Ignition: <b>ON</b> Press rear of left rear seat heater switch (S51/3) or right rear seat heater switch (S51/4).	2 LED'S in switch will illuminate. Seat cushion and backrest cushion will warm up noticeably more than stage <b>I</b> .	23 ⇒ 1.0, 3.0, 4.0, 8.0, 9.0
⇒ 3.0 Dimming of indicator lamps in stages <b>I</b> or <b>II</b>	Ignition: <b>ON</b> Seat heaters switched on.  Parking lamps switched on.	LED'S for stage <b>I</b> or <b>II</b> light up brightly.  LED'S become dimmer.	23 ⇒ 2.0, 5.0, 6.0, 7.0, 10.0 – 12.0

1) Observe Preparation for Test, see 22.