

Diagnosis – Function Test

Component Locations

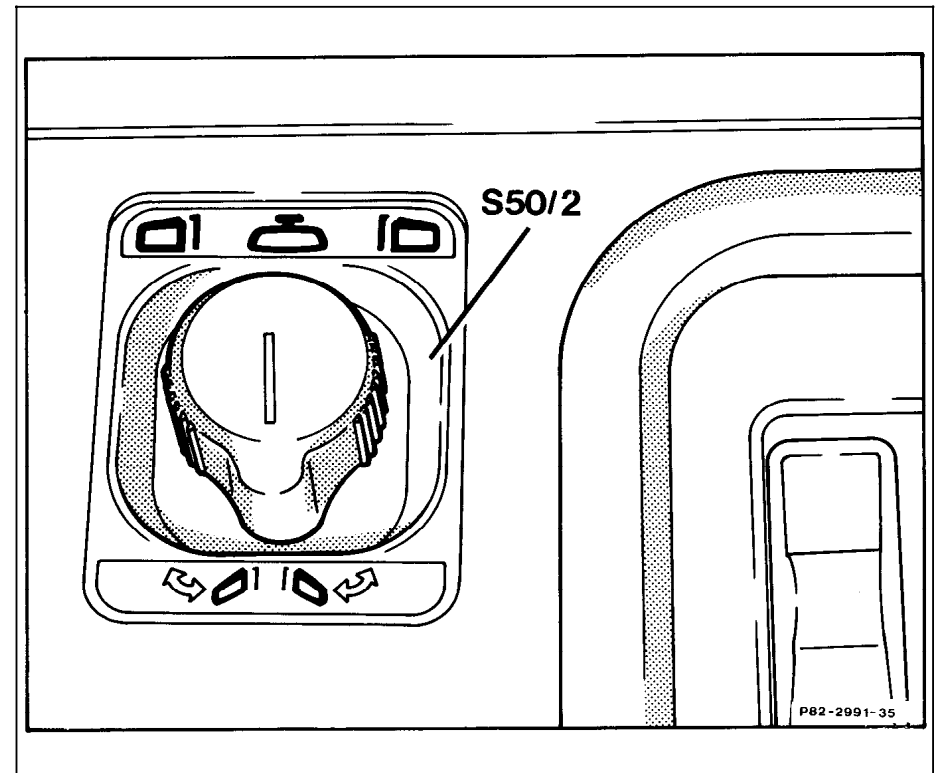


Figure 1

S50/2 Outside rearview mirror switch

P82-2991-35

P82-2991-35

Diagnosis – Function Test

Component Locations

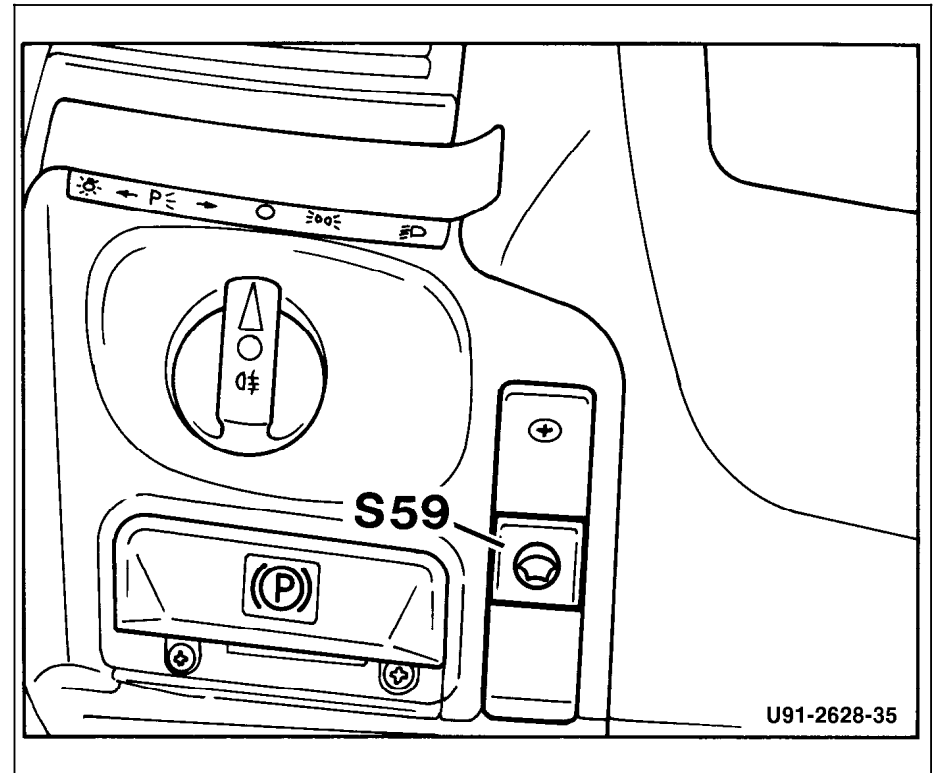


Figure 2

S59 Adjustable steering column switch

U91-2628-35

U91-2628-35

Diagnosis – Function Test

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Driver's side outside rearview mirror (M21/1) Adjust	Ignition: ON <i>or</i> Key in ignition Set mirror switch (S50/2) to driver's side mirror and adjust mirror	Adjust mirror: up down forward back	23 ⇒ 1.0 23 ⇒ 2.0
⇒ 2.0 Driver's side outside rearview mirror (M21/2) Adjust	Set mirror switch (S50/2) to passenger side mirror and adjust mirror	Adjust mirror: up down forward back	23 ⇒ 1.0 23 ⇒ 2.0
⇒ 3.0 Electrically adjustable inside rearview mirror (M21/3) Adjust	Set mirror switch (S50/2) to center position and adjust mirror	Adjust mirror: up down forward back	23 ⇒ 1.0 23 ⇒ 2.0

¹⁾ Observe Preparation for Test, see 22.

Diagnosis – Function Test

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 4.0 Outside rearview mirror Retract	Set mirror switch (S50/2) to retract position and manipulate	Retract mirror Extend mirror	23 ⇒ 1.0 23 ⇒ 2.0 23 ⇒ 7.0
⇒ 5.0 Electrically adjustable steering column Adjust	Ignition: ON <i>or</i> Key in ignition Activate switch (S59)	Adjust steering column: up down forward back	23 ⇒ 1.0 23 ⇒ 3.0 23 ⇒ 8.0 23 ⇒ 9.0
⇒ 6.0 Automatic dimming inside rearview mirror (H7) Change reflection (dim)	Ignition: ON Cover forward light sensor (daylight) Shine a pocket lamp onto rear sensor (headlamp) Cover forward light sensor (daylight) and turn on dome lamp or engage transmission range “R”	Mirror reflection adjusts Mirror reflection adjusts Mirror reflection adjusts to normal position	23 ⇒ 17.0 23 ⇒ 18.0 23 ⇒ 19.0

1) Observe Preparation for Test, see 22.