

Diagnosis - Function Test

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Adjust left outside mirror	Ignition: ON Turn mirror adjustment switch (S50) to the left mirror adjustment position and adjust.	Mirror adjustment: up down forward back	23⇒ 1.0, 3.0
⇒ 2.0 Adjust right outside mirror	Ignition: ON Turn mirror adjustment switch (S50) to the right position and adjust.	Mirror adjustment: up down outward inward	23⇒ 2.0, 3.0
⇒ 3.0 Outside mirror heating	Ignition: ON After approx. 1 minute feel mirror glass with palm of hand. Note: Temperature switching thresholds < 15° C: Mirror heating ON > 25° C: Mirror heating OFF	Both mirror lenses warm up.	23⇒ 4.0, 5.0

¹⁾ Observe Preparation for Test, see 22.

Diagnosis – Function Test

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 4.0 <i>Non-USA vehicles only.</i> <i>Continue to next test step</i>			
⇒ 5.0 Inside mirror dimming	Ignition: ON Set mirror switch to “MIN” or “MAX” position. Cover light sensor on back of automatically dimming mirror. Shine flashlight on light sensor on mirror surface. Engage reverse gear. Move selector lever out of reverse gear. Switch on ceiling lamp.	Mirror surface darkens. Mirror surface becomes lighter. Mirror surface darkens. Mirror surface becomes lighter.	23⇒11.0, 12.0, 13.0.

¹⁾ Observe Preparation for Test, see 22.