

Diagnosis – Function Test

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Driver-side outside rearview mirror adjustment	Ignition: ON , or front door open (only within 5 minutes). Set outside rearview mirror-left/right (S21s8) to driver-side mirror (left) and adjust mirror.	Adjust mirror: – up – down – forward – backward	23 ⇒ 1.0 – 3.0, 5.0 – 8.0
⇒ 2.0 Front passenger-side outside rearview mirror adjustment	Ignition: ON , or front door open (only within 5 minutes). Set outside rearview mirror-left/right (S21s8) to front passenger mirror (right) and adjust mirror.	Adjust mirror: – up – down – forward – backward	23 ⇒ 1.0, 2.0, 4.0, 10.0 – 13.0
⇒ 3.0 Electrically adjustable steering column adjustment	Ignition: ON , or driver's/front passenger door open. Press steering column up/down switch or steering column in/out switch (S91s11, S91s12)	Adjust steering column – up – down – forward – backward	23 ⇒ 2.0, 17.0, 18.0, 19.0
⇒ 4.0 Non-USA vehicles only, continue to next test step.	–	–	–
⇒ 5.0 Outside rearview mirror heating.	Ignition: ON After approx. 1 minute touch mirror with palm of hand.	Both outside rearview mirror lenses heat up. Note: ON or OFF heating temperatures < 59 °F: mirror heating ON > 77 °F: mirror heating OFF	23 ⇒ 8.0, 9.0

1) Observe Preparation for Test, see 22.