

### Diagnosis – Function Test



#### Preparation for Test:

1. Review 21, 22, 23 entirely.
2. Battery voltage 11 – 14 V,
3. Fuses are OK.
4. Convenience feature is functional.

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy <sup>1)</sup>
⇒ 1.0 Left outside rearview mirror <b>Vertical adjustment</b>	Turn outside rearview mirror-left/ right (S21s8) to left position.  Press outside rearview mirror-vertical adjustment switch (S21s6):  Forward: Backward:	Left outside rearview mirror: Adjusts UP Adjusts DOWN	23 ⇒ 3.0 23 ⇒ 5.0
⇒ 2.0 Left outside rearview mirror <b>Horizontal adjustment</b>	Turn outside rearview mirror-left/ right (S21s8) to left position.  Press outside rearview mirror-horizontal adjustment switch(S21s7):  Left: Right:	Left outside rearview mirror: adjusts to left adjusts to right	23 ⇒ 4.0 23 ⇒ 6.0
⇒ 3.0 Right outside rearview mirror <b>Vertical adjustment</b>	Turn outside rearview mirror-left/ right (S21s8) to right position.  Press outside rearview mirror-vertical adjustment switch(S21s6):  Forward: Backward:	Left outside rearview mirror: Adjusts UP Adjusts DOWN	23 ⇒ 7.0 23 ⇒ 9.0

<sup>1)</sup> Observe Preparation for Test, see 22.

### Diagnosis – Function Test

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy <sup>1)</sup>
⇒ 4.0 Right outside rearview mirror <b>Horizontal adjustment</b>	Turn outside rearview mirror-left/ right (S21s8) to right position.  Press outside rearview mirror-horizontal adjustment switch(S21s7):  Left: Right:	Left outside rearview mirror: adjusts to left adjusts to right	23 ⇒ 8.0 23 ⇒ 10.0
⇒ 5.0 Left outside rearview mirror <b>Mirror Heating</b>	Ignition: <b>ON</b> If outside air temperature is > 15° C (59° F): Spray mirror with "Electronic Freeze Mist" (aerosal can) for 10 seconds to coat mirror glass with frost.	Left outside rearview mirror glass warms up after approx. 1 minute.   ON/OFF temperature switching thresholds: < 15° C (59° F): Mirror heating <b>ON</b> > 25° C (77° F): Mirror heating <b>OFF</b>	23 ⇒ 11.0
⇒ 6.0 Right outside rearview mirror <b>Mirror Heating</b>	Ignition: <b>ON</b> If outside air temperature is > 15° C (59° F): Spray mirror with "Electronic Freeze Mist" (aerosal can) for 10 seconds to coat mirror glass with frost.	Right outside rearview mirror glass warms up after approx. 1 minute.   ON/OFF temperature switching thresholds: < 15° C (59° F): Mirror heating <b>ON</b> > 25° C (77° F): Mirror heating <b>OFF</b>	23 ⇒ 12.0

<sup>1)</sup> Observe Preparation for Test, see 22.