

**Diagnosis - Complaint Related Diagnostic Chart (driver-side or driver/passenger-side airbag)**

Complaint/Problem	Possible cause	Test step/Remedy <sup>1)</sup>
SRS malfunction indicator lamp (A1e15) does not come on with ignition key in position "1", does not go out after approximately 4 seconds, flickers or comes on while driving.	-	12 DTC Memory

<sup>1)</sup> Observe Preparation for Test, see 22.