

Diagnosis - Function Test (driver/passenger-side airbag)

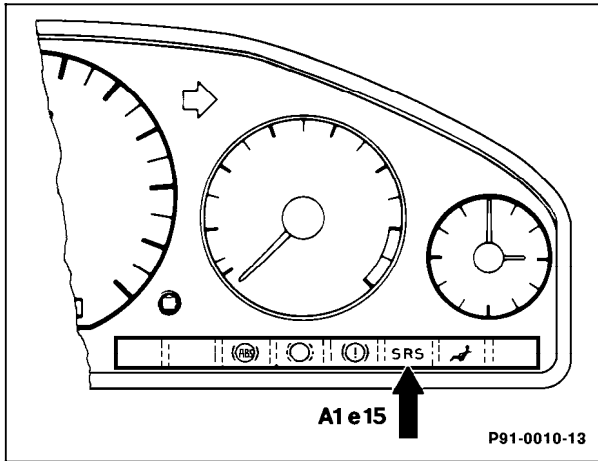


Figure 1
A1e15 SRS malfunction indicator lamp

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Supplemental Restraint System	Ignition key in position "1".	SRS malfunction indicator lamp (A1e15) comes on for approximately 4 seconds.	DTC Memory 12

1) Observe Preparation for Test, see 22.