

Diagnosis - Complaint Related Diagnostic Chart (driver/passenger-side airbag)

Complaint/Problem	Possible cause	Test step/Remedy ¹⁾
SRS malfunction indicator lamp (A1e15) does not come on with ignition key in position "1", does not go out after approximately 4 seconds, flickers or comes on while driving.	-	DTC Memory 12

¹⁾ Observe Preparation for Test, see 22.