

Electrical Test Program - Component Locations (driver/passenger-side airbag)

Model 140

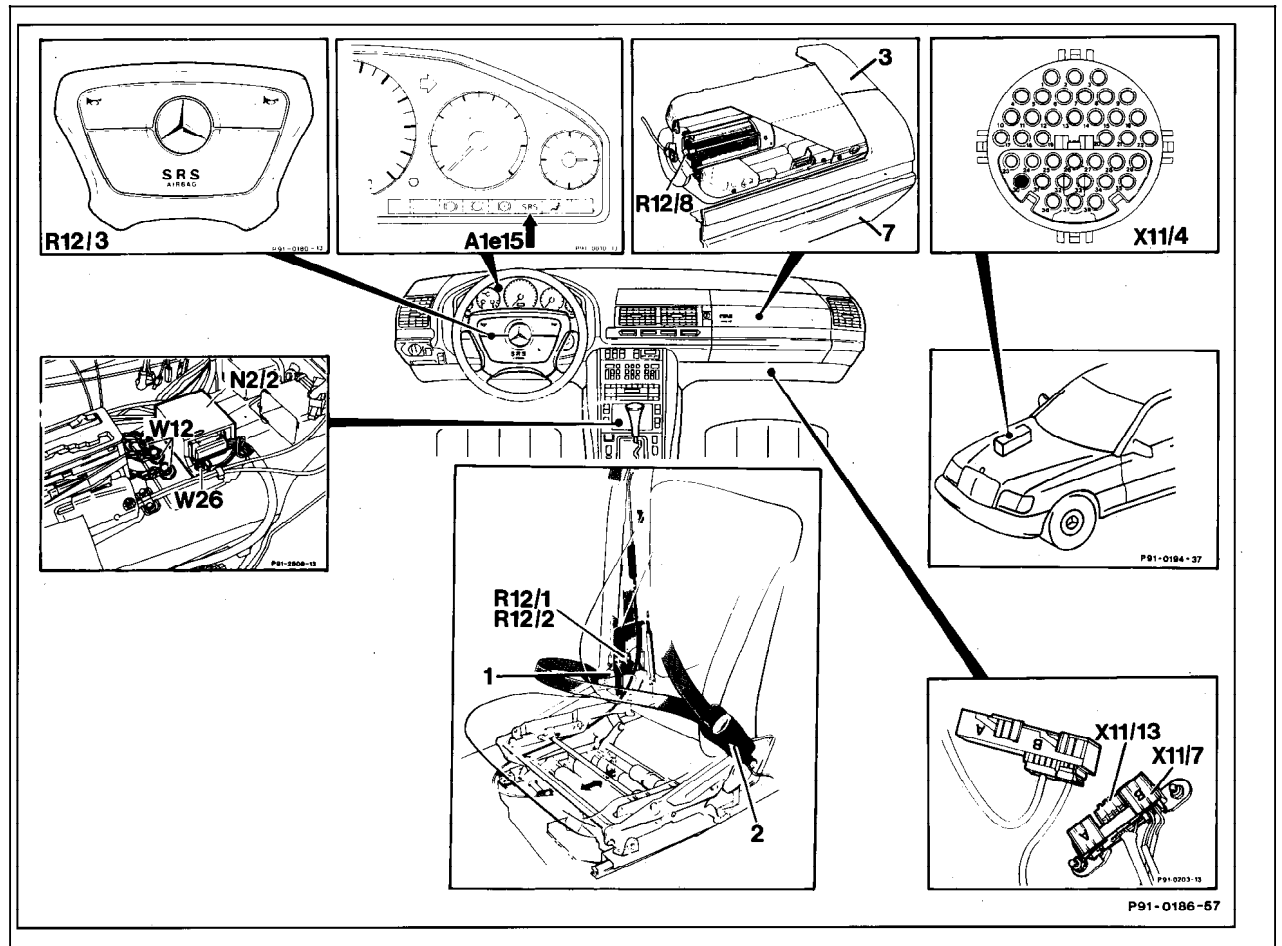


Figure 1

- 2 Driver and/or front passenger seat belt buckle switch
- A1e15 SRS malfunction indicator lamp
- N2/2 SRS control module
- R12/1 Left front emergency tensioning retractor squib
- R12/2 Right front emergency tensioning retractor squib
- R12/3 Driver airbag squib
- X11/4 Data link connector (DTC readout)
- X11/7 ETR test connection (4-pole)
- X11/13 SRS test connection (12-pole)

P91-0186-57