

Electrical Test Program - Preparation for Test (driver/passenger-side airbag)

Preliminary work:

Diagnosis - Diagnostic Trouble Code (DTC) Memory 12

1. Battery voltage 11–14 V.
2. SRS malfunction indicator lamp (A1e15) comes on.
3. Ignition: **OFF**, disconnect and cover battery negative terminal.
4. Disconnect SRS test connection (X11/13).
5. Connect socket box and test cable according to connection diagram (Figure 1).

Electrical Wiring Diagrams :

Electrical Troubleshooting Manual, Model 140.

WARNING!

Do not connect battery charger.

Note concerning Test Connection column in 23:

example


32 ⇒ 1.0 (B.1)

B= connector

1=socket 1


Electrical Test Program - Preparation for Test (driver/passenger-side airbag)

Special Tools

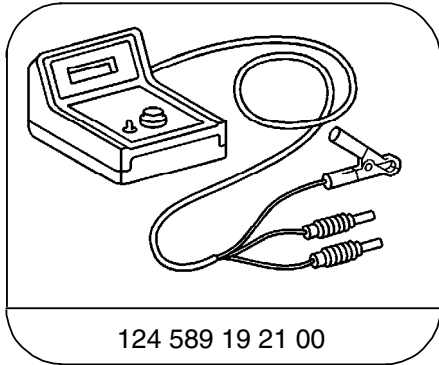


124 589 19 21 00

Pulse counter

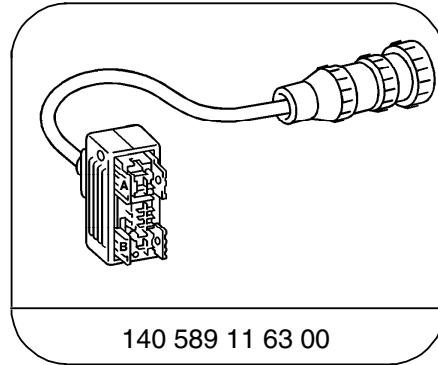

140 589 11 63 00

Test cable

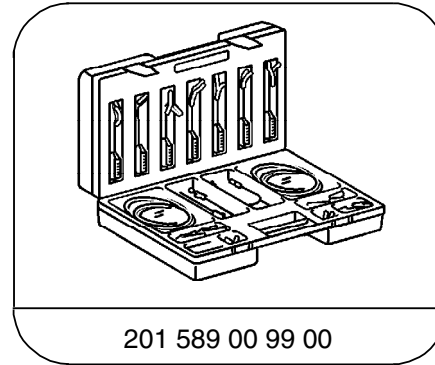

201 589 00 99 00

Electrical connecting set

Equipment

Digital multimeter ¹⁾	Fluke models 23, 83, 85, 87
----------------------------------	-----------------------------

¹⁾ Available through the MBUSA Standard Equipment Program.

Electrical Test Program - Preparation for Test (driver/passenger-side airbag)

Connection Diagram - Socket Box Tester/Digital Multimeter

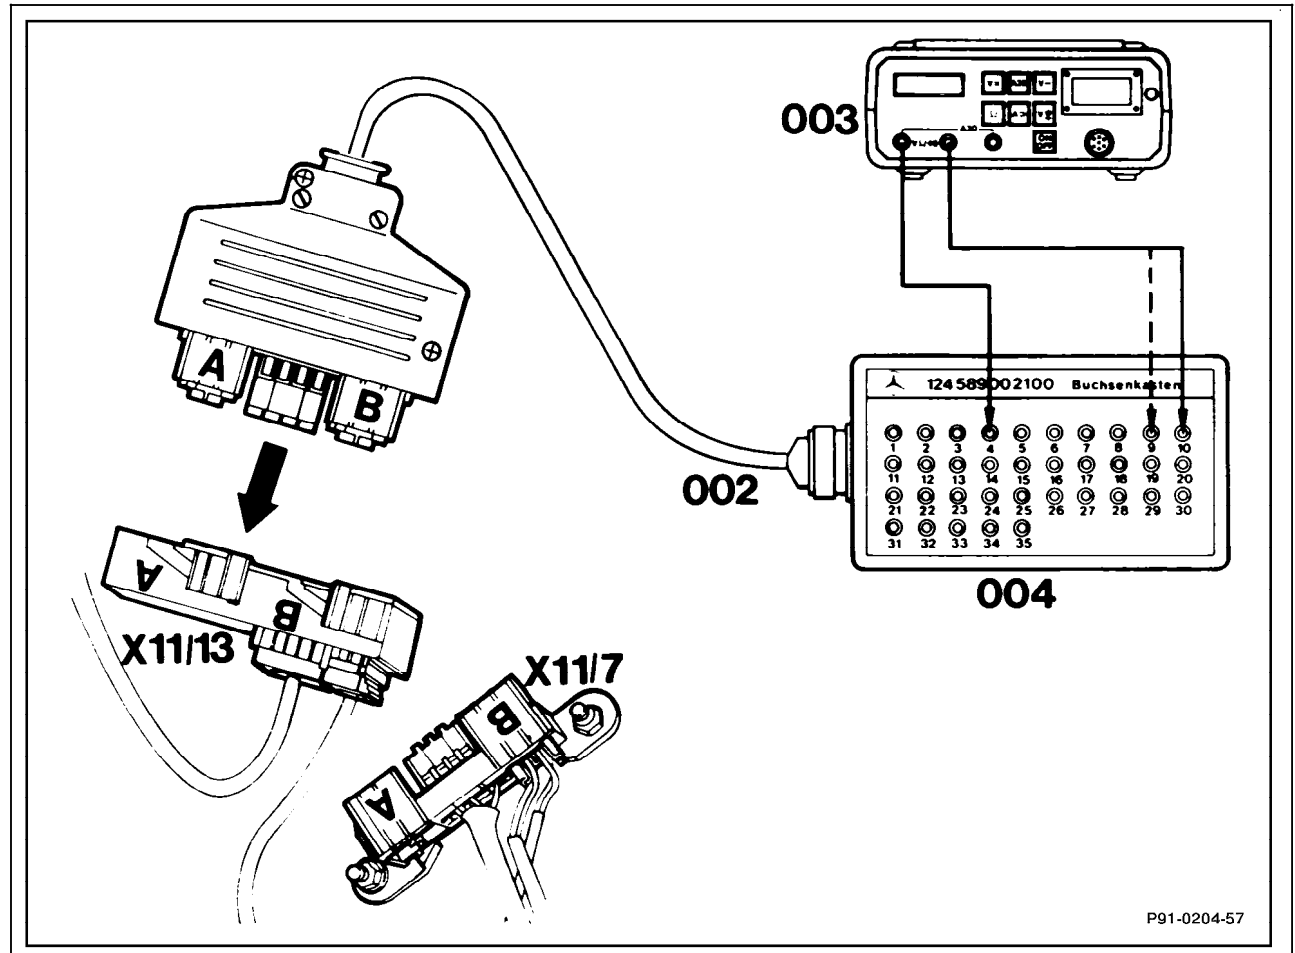


Figure 1

- 002 Test cable 124 589 35 63 00
- 003 Digital multimeter
- 004 Socket box
- X11/7 ETR test connection
- X11/13 SRS test connection

P91-0204-57

P91-0204-57