Diagnosis - Fault Frequency, Time Span (driver/passenger-side airbag/side airbag)

For each fault a fault time span is provided, showing start and end of fault

AB [DTC Memory				Example: • Fault frequency:	Periodic Faults: Fault noted 4 times.
Fault Frequency 4					• Time span since the first fault is:	6 h. 11 min. 14 sec.
Time span since first fault is: 6 h. 11 min. 14 sec.					• Time span since last fault noted is:	4 h. 35 min. 12 sec.
Time span since last fault noted is: 4 h. 35 min. 12 sec.						
		«				

Fault Frequency (count)

