

Diagnosis - Actual Values (driver/passenger-side airbag/side airbag)

Four displays are possible:

✓, F, ON, OFF.

- ✓ : Noted values are within the nominal values.
- F : Noted values are **outside** the nominal values.
- ON: Seat belt buckle **latched** (USA), front passenger seat occupied, MB "**Babysafe**" child seat recognized.
- OFF: Seat belt buckle **not** latched (USA), front passenger seat **not occupied**, MB "**Babysafe**" child seat **not** recognized.

Contrary to DTC memory, actual values are updated continuously, even during diagnosis. This allows intermittent faults to be recognized by moving/shaking components, connectors or wiring harnesses.

Control Module Versions

Information regarding the AB control modules and Side airbag sensors can be readout:

- Model
- Manufacture location
- Manufacture date
- Daily manufacture number (as of 12/96 only)