

## Electrical Test Program – Connection of Components


**Driver/passenger-side airbag/side airbag/passenger seat occupied recognition with child seat recognition  
Shown on Model 170**



E16 Automatic child seat recognition (ASCR) indicator lamp not shown (however like N72e1).

Figure 1

- A1e15 SRS MIL
- A53 Left side airbag sensor
- A54 Right side airbag sensor
- B41/1 Front passenger seat occupied recognition sensor
- B48 Front passenger seat occupied recognition with automatic child seat recognition (ACSR) (model 170 only)
- K56 Crash separation relay module (generator/battery) (Kompressor model only)
- N2/2 SRS control module
- N72e1 Automatic child seat recognition warning lamp
- R12/1 Left front ETR squib
- R12/2 Right front ETR squib
- R12/3 Driver airbag squib
- R12/8 Front passenger airbag squib
- R12/9 Left side airbag squib
- R12/10 Right side airbag squib
- S68/3 Left front seat belt buckle switch (airbag/ETR) (USA)
- S68/4 Right front seat belt buckle switch (airbag/ETR) (USA)
- X11/4 Data link connector (DTC readout)

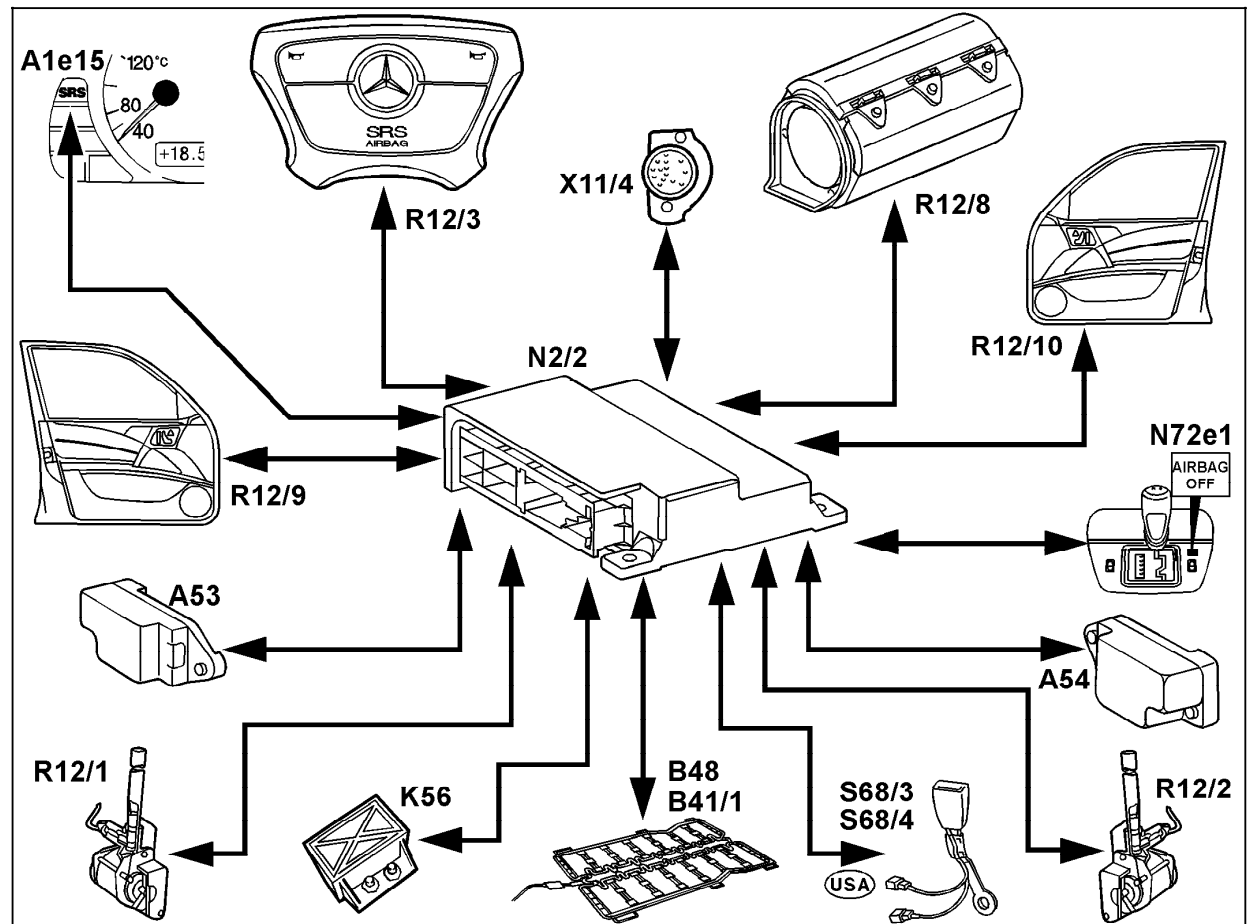

P91.60-0373-06