

Control Module Programming - Parameters

After programming the vehicle equipment, the SRS MIL (A1e15) will continue to blink, indicating the need to set the parameters on the SRS control module (N2/2). Currently, the parameter set is identical for all models.

The setting of the parameters can only be accomplished with the Hand-Held Tester (HHT).

Setting Parameters:

Change versions as necessary (as with programming control module).

(example given):

Vehicle with Airbag

Programming:

Set passenger side airbag to NO,

Turn ignition OFF, then ON,

Read out DTC memory, then erase DTCs,

SRS MIL (A1e15) now blinks; set parameters via HHT.

Note:

After programming and setting SRS control module parameters, the SRS MIL (A1e15) will go out.

CAUTION!

To avoid damaging the SRS control module (N2/2), DO NOT interrupt the voltage supply to the control module while setting the parameters.

Setting of parameters can only be performed once.