16.4 Airbag (AB) Model 163

Diagnosis - Fault Frequency, Time Span (driver/passenger-side airbag/side airbag)

For each fault a fault time span is provided, showing start and end of fault

| AB | DTC Memory |
|---|------------|
| Fault Frequency 4 | |
| Time span since first fault is: 6 h. 15 min. | |
| Time span since last fault noted is: 4 h. 35 min. | |
| | ≪ |

Example:

- Fault frequency:
- Time span since the first fault is:
- Time span since last fault noted is:


Periodic Faults:

Fault noted 4 times.

6 h. 15 min.

4 h. 35 min.

Fault Frequency (count)

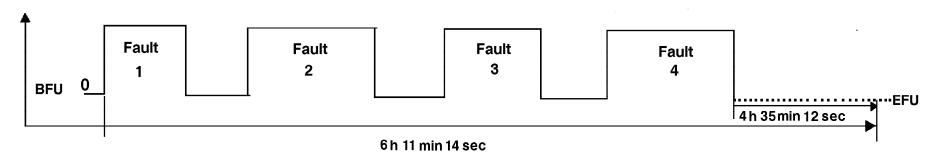

Time span (h, min, sec.)
BFU: Start of Fault Time Span.
EFU: End of Fault Time Span.

0 Fault not present. 1, 2, 3, 4 Fault present (occured

Fault present (occured 4 times, did not occur 4 times).

U00-0001.1-JH