

Diagnosis - Actual Values (driver/passenger-side airbag/side airbag)**Actual values:**

Four displays are possible:

√, F, ON, OFF.

√ : Noted values are within the nominal values.

F : Noted values are **outside** the nominal values.

ON: Seat belt buckle latched (USA), front passenger seat occupied.

OFF: Seat belt buckle **not** latched (USA), front passenger seat **not occupied**.

Contrary to the DTC memory, actual values are updated continuously, even during diagnosis, so that, e.g.: by moving components, or connections and wiring harnesses, intermittent failures may be indicated, recognized.

Additional Actual Values:

If so equipped, with Seat Occupied Recognition (SOR) with Automatic Child Seat Recognition (ACSR) the additional information is shown:

Function: F / SOR / ACSR

(SOR continues to be active regardless if MB Child seat "Babysafe" is not used or recognized).

Passenger seat: Occupied / Not occupied

Child seat: F / recognized / not used

Facing direction of child seat: F / Forwards / Backwards



The actual values: SOR/ACSR are updated approx. every 15 seconds.