16.4 Airbag (AB) Model 163


Electrical Test Program – Component locations

Components locations Model 163 (up to 12/99)

Figure 1

A1e9 Seat belt reminder lamp
A1e15 SRS MIL
A1e56 AIRBAG OFF indicator lamp
R12/3 Driver AB squib

R12/4 Front passenger AB squib 1

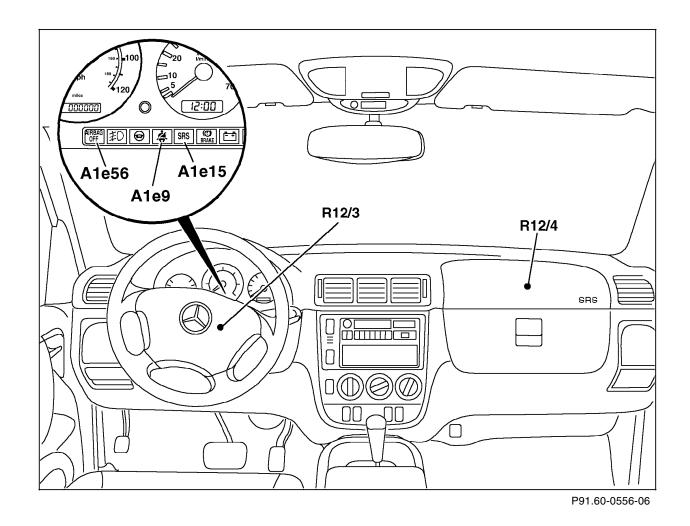

16.4 Airbag (AB) Model 163

Electrical Test Program – Component locations

Components locations Model 163 (up to 12/99)

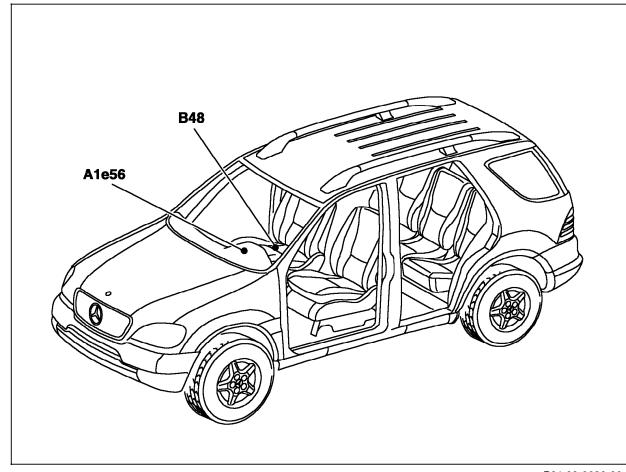


Figure 2

A1e56 AIRBAG OFF indicator lamp

B48 Front passenger seat occupied recognition with

automatic child seat recognition (ACSR)

P91.60-0686-06

16.4 Airbag (AB) Model 163


Electrical Test Program – Component locations

Components locations Model 163 (up to 12/99)



N2/2 SRS control module R12/2 Front passenger ETR squib R12/10 Right side airbag squib

S68/7 Left front seat belt buckle/belt lock switch
S68/8 Right front seat belt buckle/belt lock switch

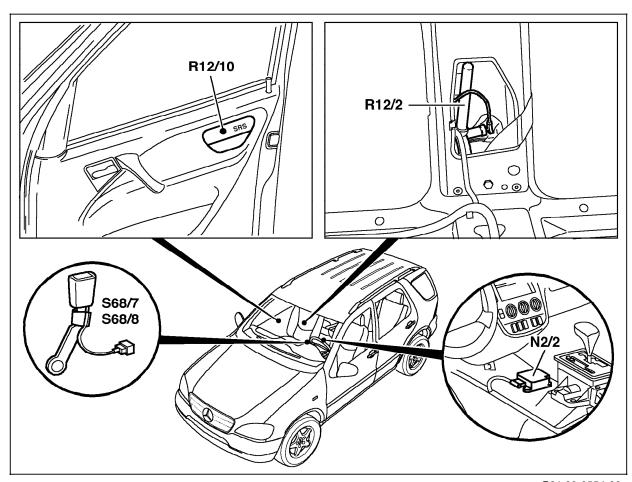

P91.60-0554-06