

Diagnosis - Fault Frequency, Time Span (driver/passenger-side airbag/side airbag)

For each fault a fault time span is provided, showing start and end of fault.

AB	DTC Memory
Fault Frequency 4	
Time span since first fault is: 6 h. 11 min. 14 sec.	
Time span since last fault noted is: 4 h. 35 min. 12 sec.	
	⏪


Example:

- Fault frequency:
- Time span since the first fault is:
- Time span since last fault noted is:

Periodic Faults:

- Fault noted 4 times.
- 6 h. 11 min. 14 sec.
- 4 h. 35 min. 12 sec.

Fault Frequency (count)

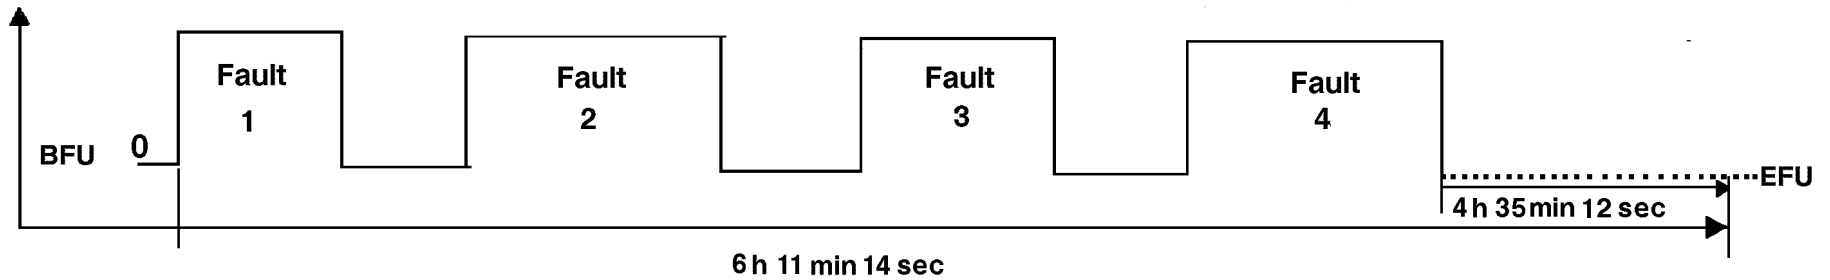

Time span (h, min, sec.) 0 Fault not present.
 BFU: Start of Fault Time Span. 1, 2, 3, 4 Fault present (occured 4 times, did not occur 4 times).
 EFU: End of Fault Time Span.

U00-0001-JH