

## 16.6 Airbag (AB)

Model 210 as of M.Y. 1999


### Electrical Test Program – Connection of Components

#### Connection of Components

Model 210 with rear door sidebags,  
rear seat belt ETR's and windowbags

Figure 1

A1e15	SRS MIL
A35/8	Emergency call system control module (TELE AID) (USA)
A53/1	Left side airbag sensor
A54/1	Right side airbag sensor
B48	Front passenger seat occupied recognition with automatic child seat recognition (ACSR)
N2/7	ARMIN control module
N3/10	Engine control module (ME-SFI)
N39/2	EDC control module
N72e1	Automatic child seat recognition warning lamp
R12/1	Driver ETR squib
R12/2	Front passenger ETR squib
R12/3	Driver AB squib
R12/6	LR ETR squib
R12/7	RR ETR squib
R12/8	Front passenger AB squib
R12/11	LR side airbag squib
R12/12	RR side airbag squib
R12/20	Left front side airbag squib
R12/21	Right front side airbag squib
R12/22	Left rear windowbag squib
R12/23	Right rear windowbag squib
S68/3	Left front seat belt buckle switch (airbag/ETR) (USA)
S68/4	Right front seat belt buckle switch (airbag/ETR) (USA)
X11/4	Data link connector (DTC readout)

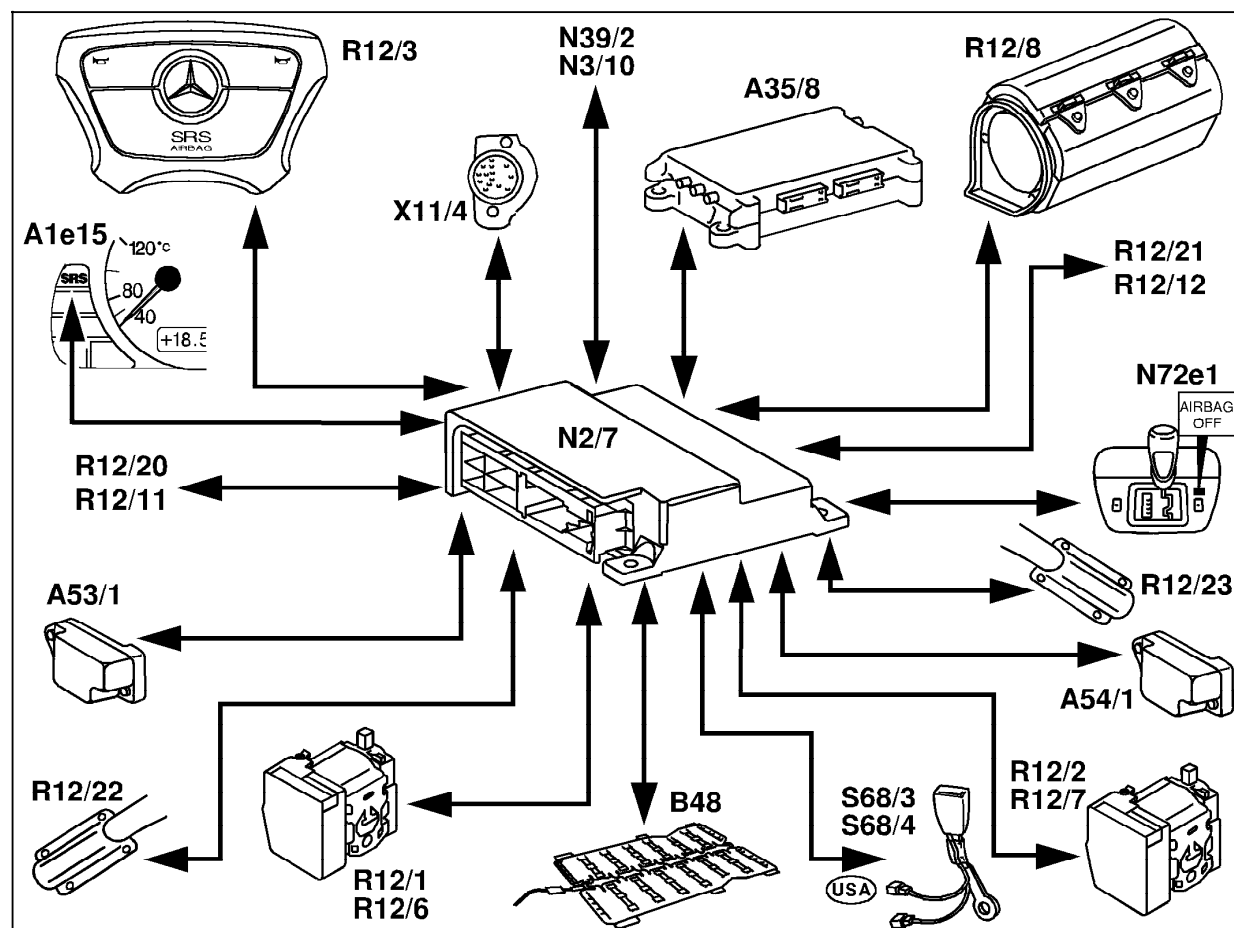

P91.60-2029-06