

Electrical testing program Component locations

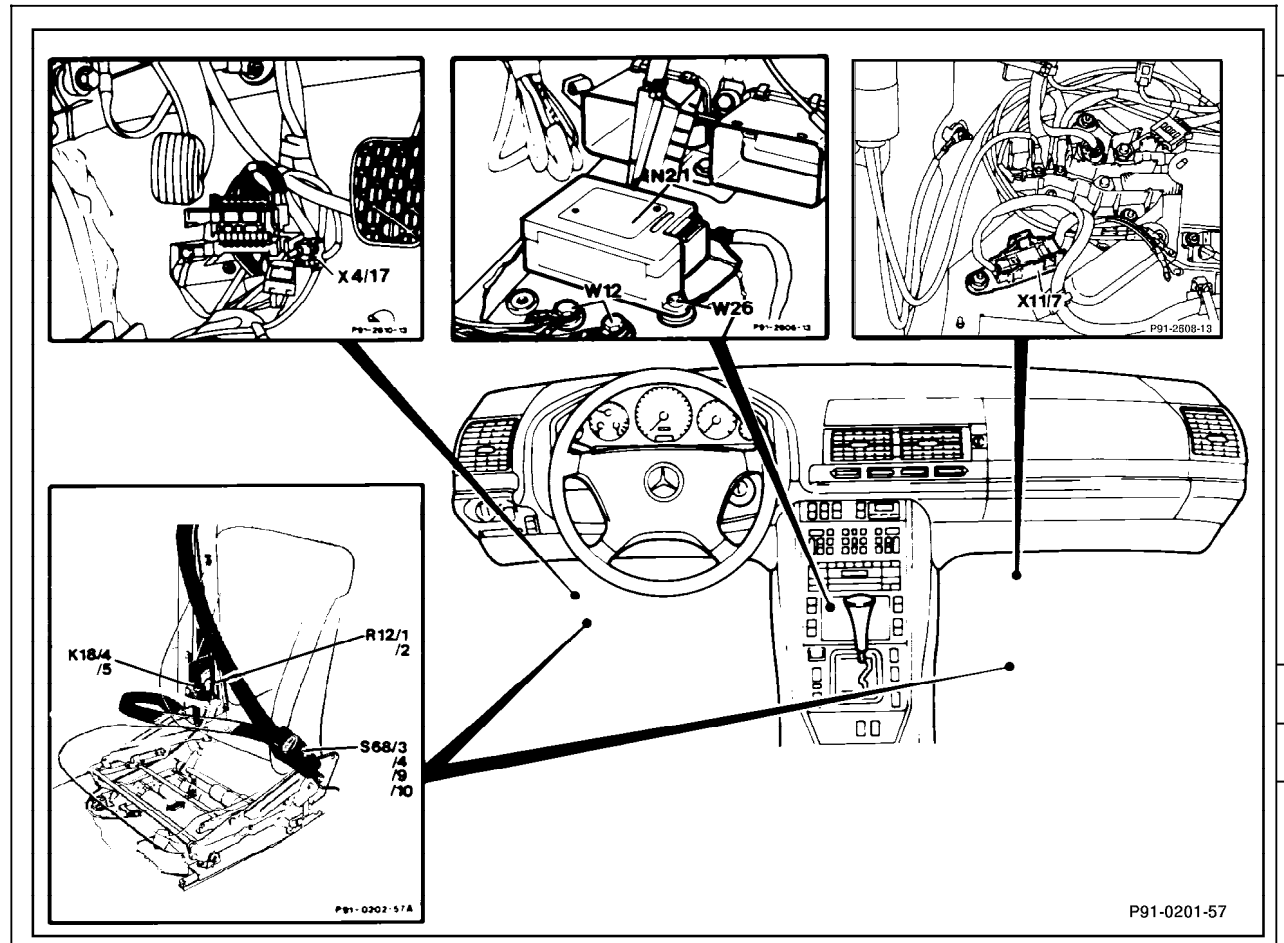


Figure 1

- K18/4 Driver seat belt adjustment solenoid
- K18/5 Front passenger seat belt adjustment solenoid
- N2/1 ETR control unit
- R12/1 Left front emergency tensioning retractor (ETR) squib
- R12/2 Right front emergency tensioning retractor (ETR) squib
- S68/9 Drive seat belt buckle switch (belt position/convenience)
- S68/10 Front passenger seat belt buckle switch (belt position/convenience)
- X4/17 Terminal block, terminal 15C
- X11/7 Test connection, ETR

P91-0201-57

P91-0201-57