

Electric test program Testing the seat belt tensioning system

Test step	Scope of test	Test equipment/ test connection	Test condition	Nominal value	Possible cause/remedy
⇒ 1.0	Left front emergency tensioning retractor (ETR) squib (R12/1)	<p>X11/7 9 — (B.1) ← Ω → 10 (B.2)</p>	Ignition: OFF Disconnect test connection, ETR (X11/7) (24, figure 1)	2–5 Ω	Wiring Left seat belt tensioner (91-0630)
⇒ 2.0	Right front emergency tensioning retractor (ETR) squib (R12/2)	<p>X11/7 11 — (B.3) ← Ω → 12 (B.4)</p>	Ignition: OFF Disconnect test connection, ETR (X11/7) (24, figure 1)	2–5 Ω	Wiring Right seat belt tensioner (91-0630)