

### Diagnosis - Function Test

| Test step/Test sequence   | Test condition   | Nominal value                                  | Possible cause/Remedy <sup>1)</sup>    |
|---|--|--|--|
| ⇒ 1.0 <b>Rear power bench seat, fore/aft adjustment</b><br>Left switch (S53/1)                      | Ignition: <b>ON</b><br>Activate power bench seat switch (S53/1s1) fore/aft               | Rear bench seat adjusts forward/backward       | 23 ⇒ 1.0<br>23 ⇒ 3.0, 4.0              |
| ⇒ 2.0 <b>Rear power bench seat, head restraint raise/lower adjustment</b><br>Left switch (S53/1)    | Ignition: <b>ON</b><br>Activate power bench seat switch (S53/1s2) head restraint up/down | Rear bench seat head restraints adjust up/down | 23 ⇒ 1.0<br>23 ⇒ 5.0, 8.0              |
| ⇒ 3.0 <b>Rear power bench seat, fore/aft adjustment</b><br>Right switch (S54/1)                     | Ignition: <b>ON</b><br>Activate power bench seat switch (S54/1s1) fore/aft               | Rear bench seat rear adjusts forward/backward  | 23 ⇒ 2.0<br>23 ⇒ 3.0, 4.0              |
| ⇒ 4.0 <b>Rear power bench seat, head restraint raise/lower adjustment</b><br>Right switch (S54/1)   | Ignition: <b>ON</b><br>Activate power bench seat switch (S54/1s2) head restraint up/down | Rear bench seat head restraints adjust up/down | 23 ⇒ 2.0<br>23 ⇒ 5.0<br>23 ⇒ 11.0–13.0 |
| ⇒ 5.0 <b>Rear power bench seat, head restraint raise/lower adjustment</b><br>Console switch (S52/5) | Ignition: <b>ON</b><br>Activate power bench seat switch (S52/5) head restraint up/down   | Rear bench seat head restraints adjust up/down | 23 ⇒ 5.0<br>23 ⇒ 16.0–19.0             |

<sup>1)</sup> Observe Preparation for Test, see 22.