

Diagnosis - Function Test

Test step/Test sequence	Test condition	Nominal value	Possible cause/Remedy ¹⁾	
⇒ 1.0 Rear power seat, seat cushion inclination raise/lower adjustment (Left seat switch S55/1s3) (Right seat switch S55/2s3)	Ignition: ON Activate power seat switch (s3) seat cushion raise/lower	Rear seat seat cushion inclination adjusts up/down	Left seat 23 ⇒ 1.0 23 ⇒ 2.0 23 ⇒ 3.0	Right seat 23 ⇒ 13.0 23 ⇒ 14.0 23 ⇒ 15.0
⇒ 2.0 Rear power seat, backrest fore/aft adjustment (Left seat switch S55/1s1) (Right seat switch S55/2s1)	Ignition: ON Activate power seat switch (s1) backrest fore/aft	Rear seat backrest adjusts forward/backward	Left seat 23 ⇒ 1.0 23 ⇒ 4.0 23 ⇒ 5.0 23 ⇒ 6.0	Right seat 23 ⇒ 13.0 23 ⇒ 16.0 23 ⇒ 17.0 23 ⇒ 18.0
⇒ 3.0 Rear power seat, head restraint raise/lower adjustment (Left seat switch S55/1s2) (Right seat switch S55/2s2)	Ignition: ON Activate power seat switch (s2) head restraint up/down	Rear seat head restraints adjust up/down	Left seat 23 ⇒ 1.0 23 ⇒ 7.0 23 ⇒ 8.0 23 ⇒ 9.0 23 ⇒ 10.0	Right seat 23 ⇒ 8.0 23 ⇒ 13.0 23 ⇒ 19.0 23 ⇒ 20.0 23 ⇒ 21.0
⇒ 4.0 Rear power seat, head restraint raise/lower adjustment Console switch (S52/5)	Ignition: ON Activate power seat switch (S52/5) head restraint up/down	Rear seat head restraints adjust up/down	Left seat 23 ⇒ 8.0 23 ⇒ 9.0 23 ⇒ 10.0 23 ⇒ 24.0 23 ⇒ 25.0	Right seat 23 ⇒ 8.0 23 ⇒ 20.0 23 ⇒ 21.0 23 ⇒ 24.0 23 ⇒ 25.0

1) Observe Preparation for Test, see 22.