

Electrical Test Program - Component Locations

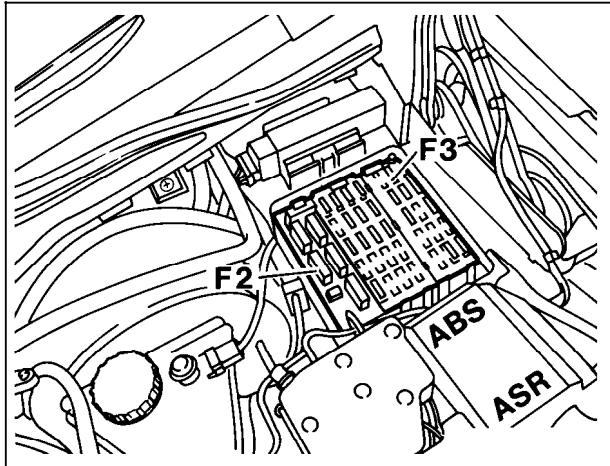


Figure 1 P54-2806-13
F3 Fuse box (35-fuse, in fuse and relay box F1)

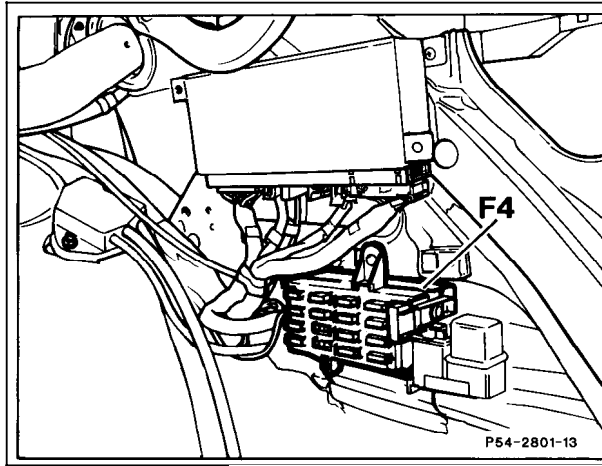


Figure 2 P54-2801-13
F4 Rear fuse box (17-fuse, in trunk)

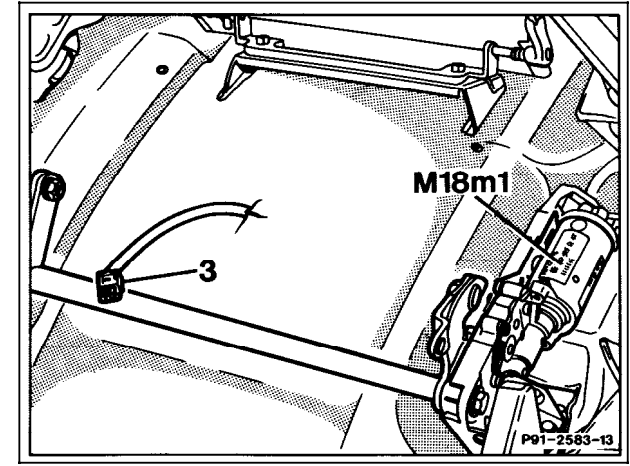


Figure 3 P91-2583-13
M18/m1 Backrest fore/aft motor

Electrical Test Program - Component Locations

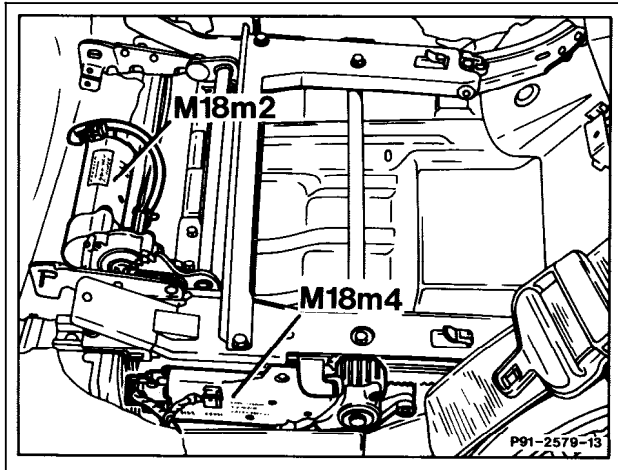


Figure 4 P91-2579-13
 M18/1m2 Cushion inclination raise/lower motor
 M18/1m4 Seat cushion fore/aft motor

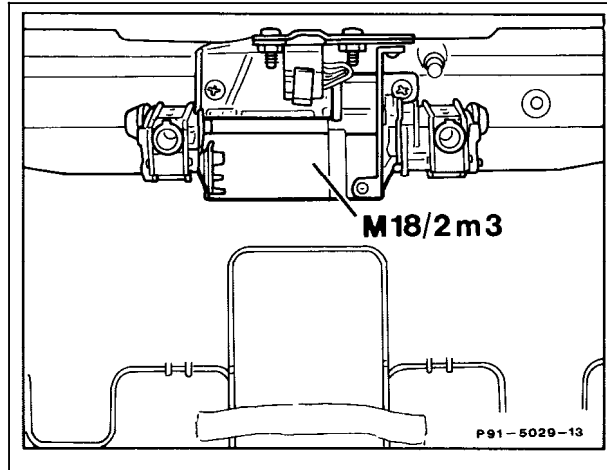


Figure 5 P91-5029-13
 M18/2m3 Head restraint raise/lower motor

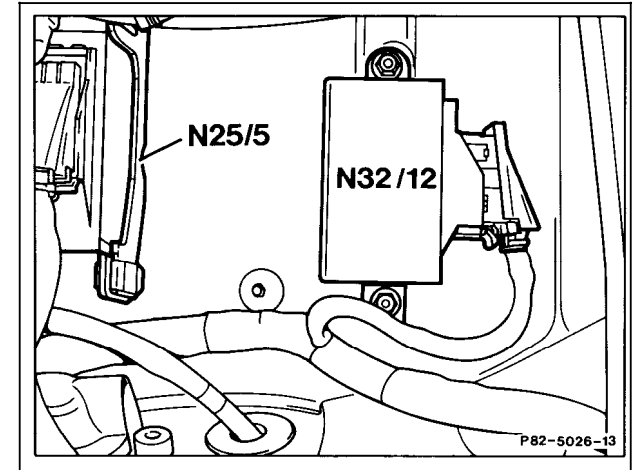


Figure 6 P82-5026-13
 N32/12 Rear head restraint control module

Electrical Test Program - Component Locations

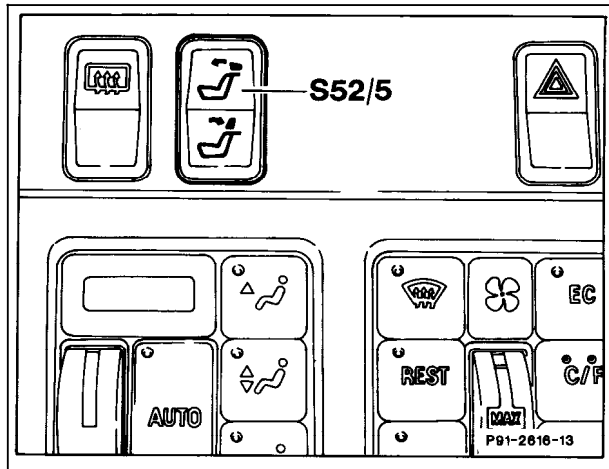


Figure 7 P91-2616-13

S52/5 Rear head restraint raise/lower switch