


Diagnosis – Function Test

Test step/Test scope	Test condition	Nominal value	Possible cause/Remedy ¹⁾
⇒ 1.0 Roll bar – crash deployment	Turn left rear axle switch (S83/2) or right rear axle switch (S83/3) to “Arretiert”. Roll bar in down position. Drive vehicle and apply hard braking at approximately 6 mph (10 km/h).	Roll bar deploys.	Diagnostic chart 12.  After the function test is complete, turn axle switch (S83/2 or S83/3) to “Function”.
⇒ 2.0 Roll bar malfunction indicator lamp (E30)	Ignition: ON Engine: At idle	Indicator lamp comes on. Indicator lamp goes out.	Diagnostic chart 12.

¹⁾ Observe Preparation for Test, see 22.