

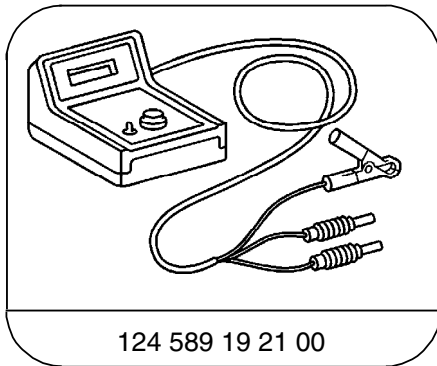
Diagnosis – Diagnostic Trouble Code (DTC) Memory

To Read Diagnostic Trouble Codes

- Connect impulse counter (yellow wire to socket 9) as shown in section 0.



Ignition: **ON**, Roll bar malfunction indicator lamp comes on.

Special Tools



Pulse counter

Diagnosis – Diagnostic Trouble Code (DTC) Memory

DTC  	Possible cause	Test step/Remedy ¹⁾
1	No diagnostic trouble codes (DTC) stored in memory.	--
2	Roll bar control module (N53)	23 ⇒ 1.0
3	Roll bar control module (N53), voltage supply.	23 ⇒ 2.0
6	Roll bar deployment solenoid (Y57/1), open circuit, short to circuit 30 or 31.	23 ⇒ 3.0
7	Rear axle switch (S83/2 or S83/3) short to circuit 30 or 31.	23 ⇒ 4.0
8	Roll bar malfunction indicator lamp (E30)	23 ⇒ 5.0

¹⁾ Observe Preparation for Test, see 22.