

Diagnosis – Diagnostic Trouble Code (DTC) Memory

CAUTION!

Risk of severe injury, ensure that no persons are within the deployment radius of the roll bar during testing and repair.

Fully extend the roll bar prior to performing any repair work. Keep body parts away from the roll bar deployment radius and its mechanism.

CAUTION!

Risk of severe injury, to eyes and skin from escaping high pressure hydraulic fluid spray.

Risk of poisoning due to consumption of hydraulic fluid.

Depressurize the hydraulic system prior to performing repair work

Wear protective clothing and safety goggles.

Preparation for Test:

1. Battery voltage: 11 to 14 V,
2. Connect HHT and review section O,



The DTC fault codes, Activations and Actual Values can be found in the HHT Menu "**UVS**".


The Electronic Ignition Lock Control Module (N73) acts as a serial interface between the Power Soft Top Control Module (N52) and the HHT.

Electrical wiring diagrams:


Electrical Troubleshooting Manual, Model 202/208, Vol. 2, Group 91

Diagnosis – Diagnostic Trouble Code (DTC) Memory

Special Tools

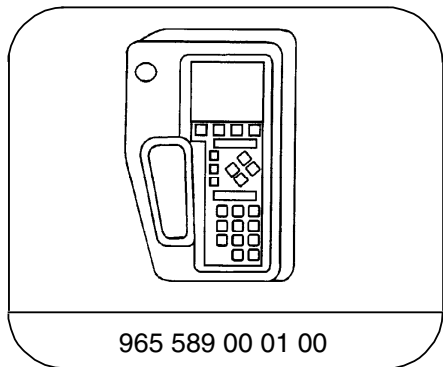

Hand-Held-Tester

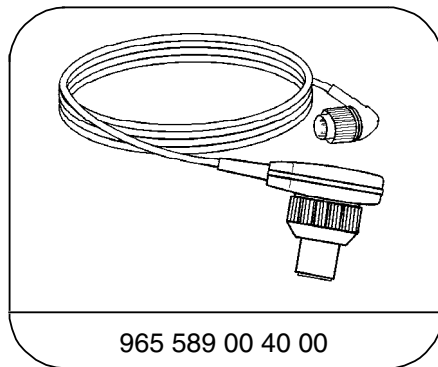

Test cable

Diagnosis – Diagnostic Trouble Code (DTC) Memory

Diagnostic trouble code (DTC) 	Possible cause	Test step/Remedy ¹⁾
UVS		See: DM, Body and Accessories, Volume 3, Section 11.5, 12

¹⁾ Observe preparation for test.