

**Version Coding**

**Version coding**

Version coding must be performed using the HHT, after the replacement of the All Activity Module (AAM) (N10). The version coding is menu driven.

Access to version coding is gained via: Body and Accessories-AAM-Control Module Adaption-Version Coding.

**Version coding**

Version	Selection
Engine	M112/M113
Country Version	Norway/Sweden/Finland/Canada/ Great Britain/Netherlands/ Switzerland/Rest of World
Left-/right Hand steering vehicle	Right Hand Drive/Left Hand Drive
Transmission	Mechanical/Automatic
Country setting for fog lamps/rear foglamp	USA/Rest of World
Foglamps as auxiliary driving lamp	ON/OFF
Air Conditioning	Installed/Not installed
Heated Seats	Installed/Not installed
Trip Computer	Installed/Not installed
Convenience Feature	Possible with Door OPEN/Only with circuit 15

Continued.

### Version Coding

#### Version coding

Version	Selection
ATA	Installed/Not installed
ATA interior protection/Anti-tow protection	Installed/Not installed
ATA self arming	ON/OFF
CL confirmation	ON/OFF
Automatic CL locking after 1 minute	ON/OFF
Automatic CL locking when driving	ON/OFF
CL automatic opening	ON/OFF
Panic Alarm	ON/OFF