
## **Electrical Test Program – Component Locations**

Models 129, 202, 208, 210, 215, 220


The transmitter pushbuttons as well as the transmitter are integrated within the interior rearview mirror.

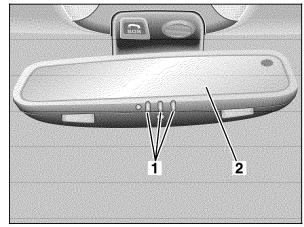

P68.05-2012-71

## Model 170

The transmitter pushbuttons as well as the transmitter are located above the interior rearview mirror.

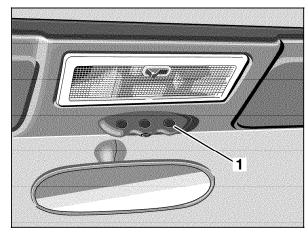


P68.05-2013-01

## **Electrical Test Program – Component Locations**

## Model 163

The transmitter pushbuttons as well as the transmitter are located in the area between the front dome lamps.

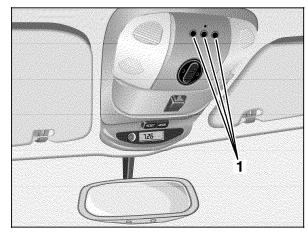

P68.05-2014-71