

Diagnosis – Reading Actual Values – via Hand-Held tester (HHT)

Preparation for Test

1. Review 11, 15, 20, 21, 22, 23, 31, 32, 41

	Possible cause	Test step/Remedy ¹⁾
02	Outside temperature indicator temperature sensor (B14)	23 ⇒ 14.0
03	Heater core temperature sensor left (B10/1)	23 ⇒ 5.0
04	Heater core temperature sensor right (B10/2)	23 ⇒ 6.0
05	Evaporator temperature sensor (B10/6)	23 ⇒ 4.0
06	ECT sensor (DFI, IFI) (B11/4)	23 ⇒ 14.0
07	Refrigerant pressure sensor (B12)	23 ⇒ 7.0
12	Software version (example: 37)	—
12	Software version (example: 08)	—

¹⁾ Observe Preparation for Test, see 22.