


Figure 1

36 Distributor valve block

### Vehicles up to Chassis End No. 1A 123445

#### Figure 2

rigule 2	
37	Left defroster flap vaccum actuator
38	Right defroster flap vaccum actuator
39	Diverter flap, left side air outlet vaccum actuator
40	Diverter flap, right side air outlet vaccum actuator
41	Diverter flap, left center air outlet vaccum
	actuator
42	Diverter flap, right center air outlet vaccum
	actuator
43	Main air flap, rear vaccum actuator
44	Main air flap, front vaccum actuator
45	Blend air flap, left center air outlet vaccum
	actuator
46	Blend air flap, right center air outlet vaccum
	actuator
47	Left footwell flap vacuum actuator
48	Right footwell flap vacuum actuator
49	Air recirculation flap vacuum actuator

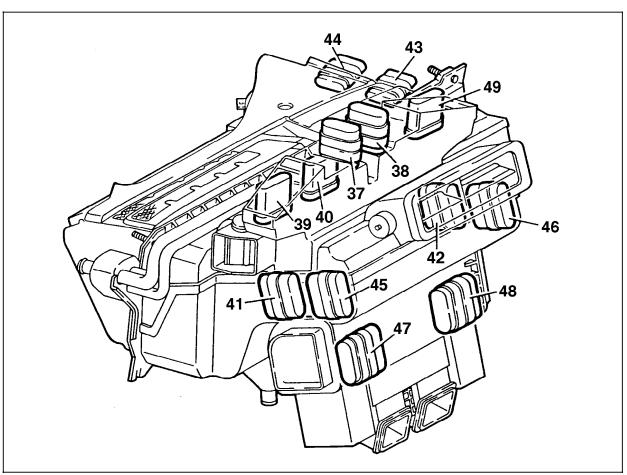


P83-5476-57

Vehicles starting Chassis End No. 1A 123446 up to 182367



i iguie 3	
37	Left defroster flap vacuum actuator
38	Right defroster flap vacuum actuator
41	Diverter flap, left center air outlet
	vacuum actuator
42	Diverter flap, right center air outlet
	vacuum actuator
43	Main air flap, rear vacuum actuator
44	Main air flap, front vacuum actuator
45	Blend air flap, left center air
	outlet vacuum actuator
46	Blend air flap, right center air
	outlet vacuum actuator
47	Left footwell flap vacuum actuator
48	Right footwell flap vacuum actuator
49	Air recirculation flap vacuum actuator

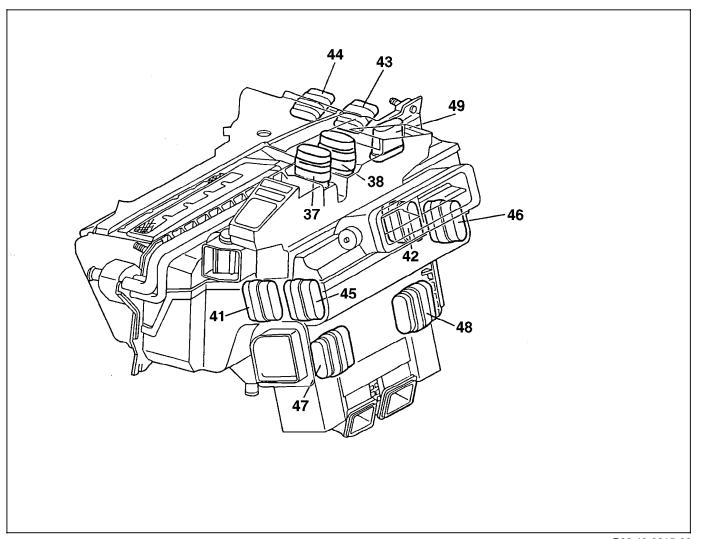


P83.40-0215-06

Vehicles up to Chassis End No. 1A 182368



i iguie 4	
37	Left defroster flap vacuum actuator
38	Right defroster flap vacuum actuator
41	Diverter flap, left center air outlet
	vacuum actuator
42	Diverter flap, right center air outlet
	vacuum actuator
44	Main air flap, front vacuum actuator
45	Blend air flap, left center air outlet
	vacuum actuator
46	Blend air flap, right center air outlet
	vacuum actuator
47	Left footwell flap vacuum actuator
48	Right footwell flap vacuum actuator
49	Air recirculation flap vacuum actuator

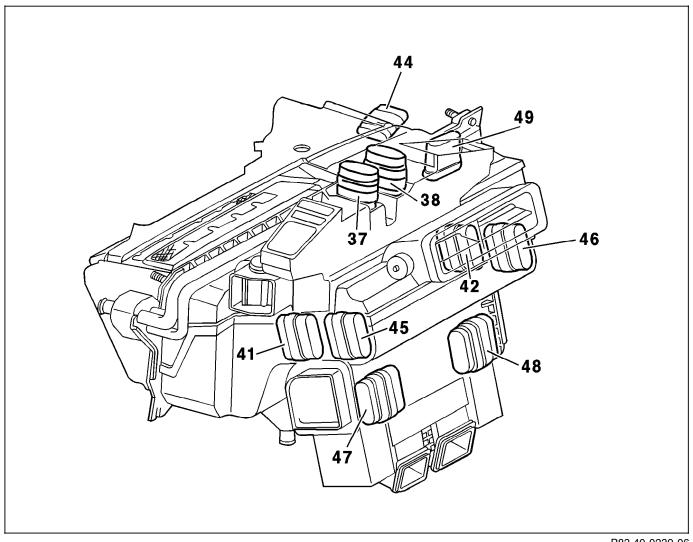

P83.40-0239-06