

Electrical Test Program – Component Locations

Component locations in passenger compartment

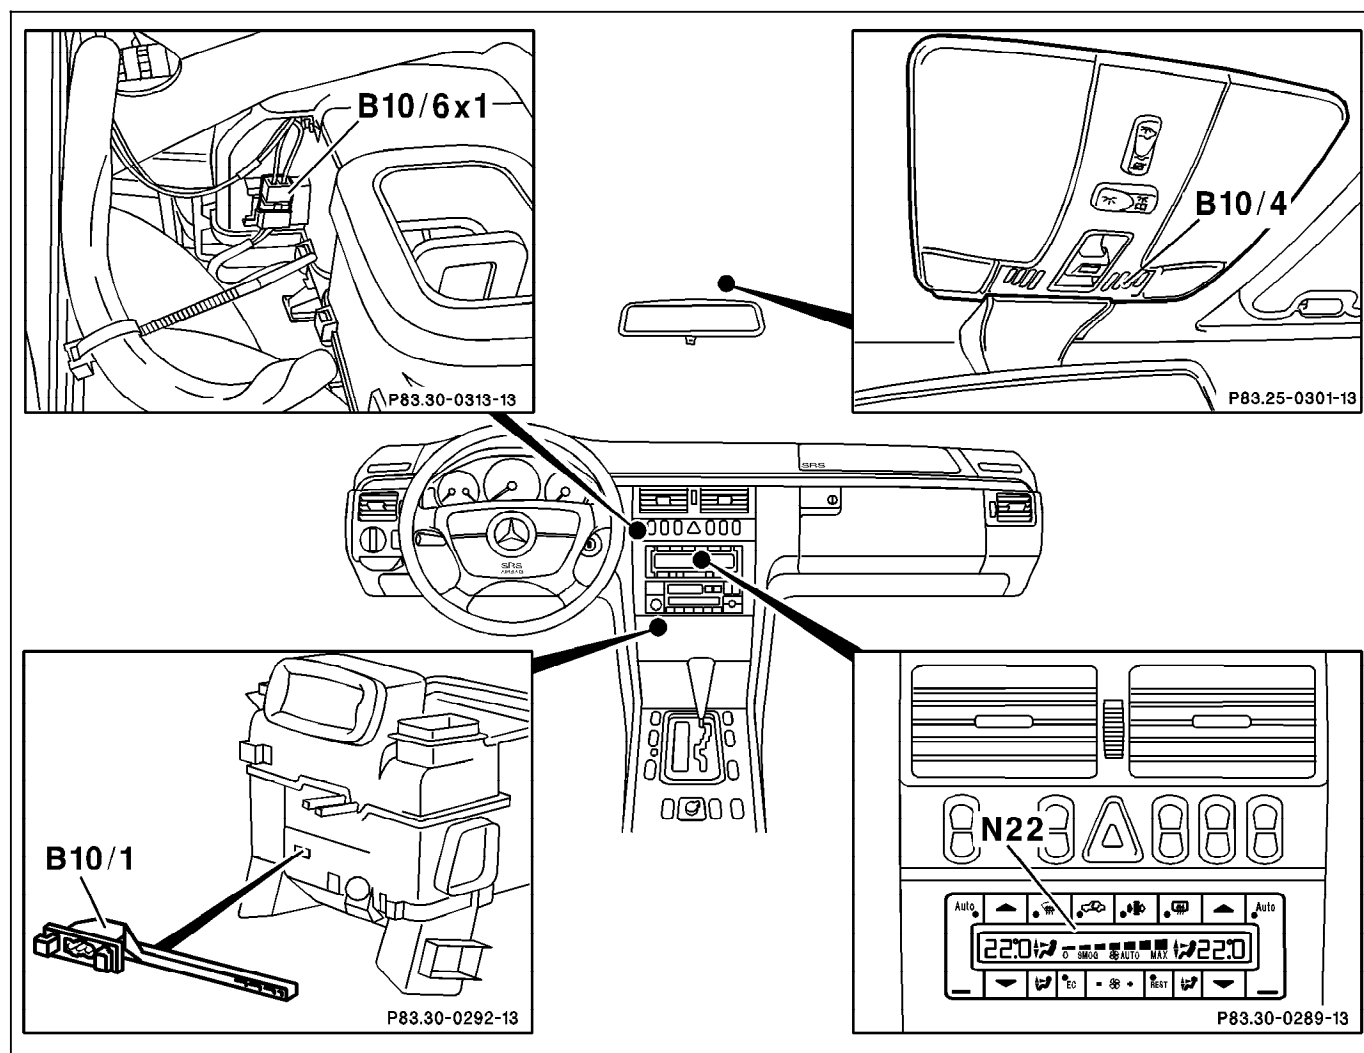


Figure 1

- B10/1 Heater core temperature sensor
- B10/4 In-car temperature sensor with aspirator
- B10/6x1 Evaporator temperature sensor connector
- N22 A/C pushbutton control module


P83.40-0269-06

Electrical Test Program – Component Locations

Component locations in engine compartment

Figure 2


B11/4 CT sensor

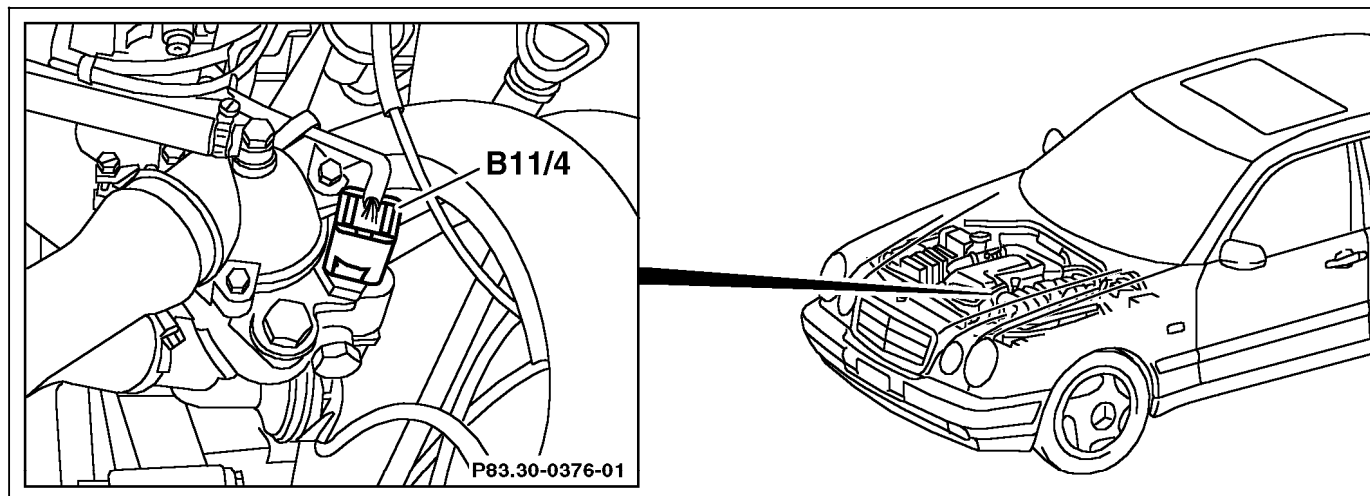

P83.40-0457-04

Figure 3

N65 Pulse module
(traction systems, HCS, ATA, AAC)

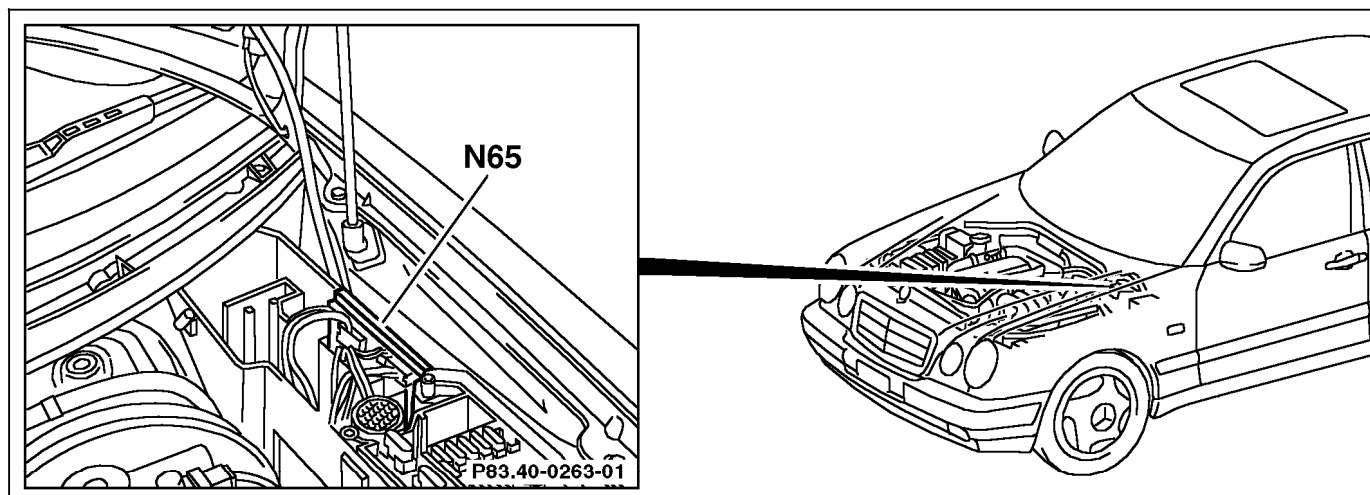


P83.40-0447-04

Electrical Test Program – Component Locations

Component locations in engine compartment

Figure 4


N65/1 AIR control module

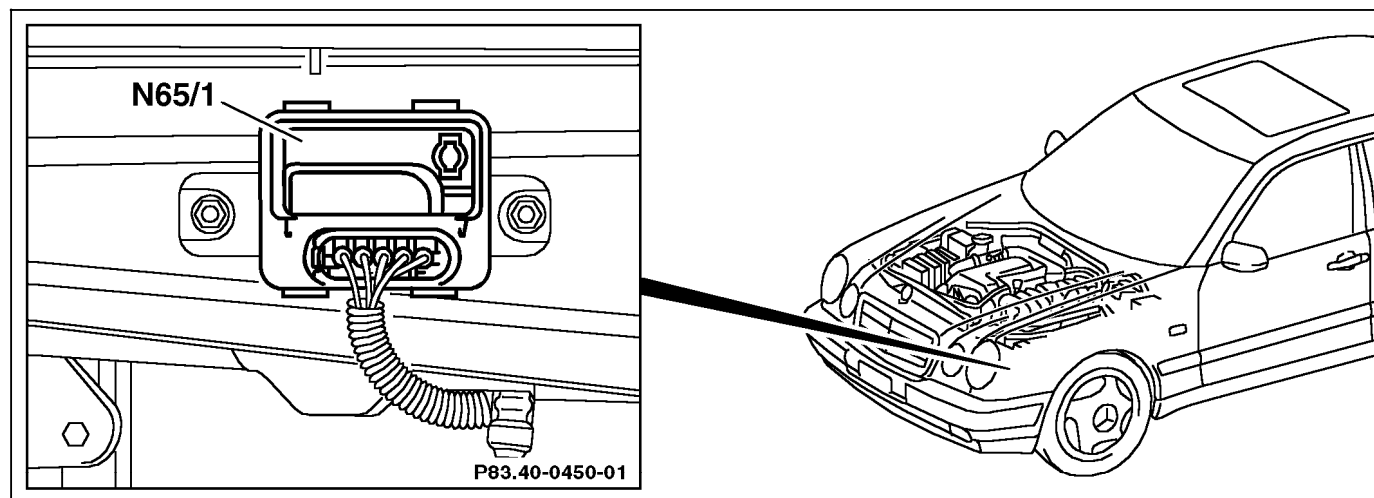

P83.40-0456-04

Figure 5

N65/1 AIR control module

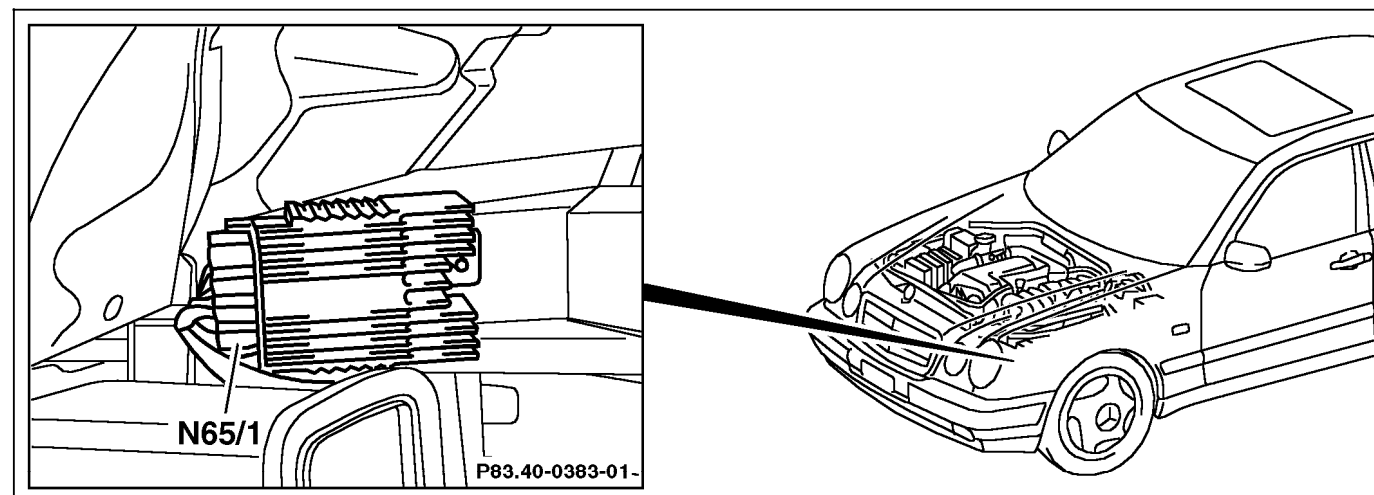


P83.40-0458-04

Electrical Test Program – Component Locations

Component locations in engine compartment

Figure 6


N76 Engine/climate control electric cooling fan control module

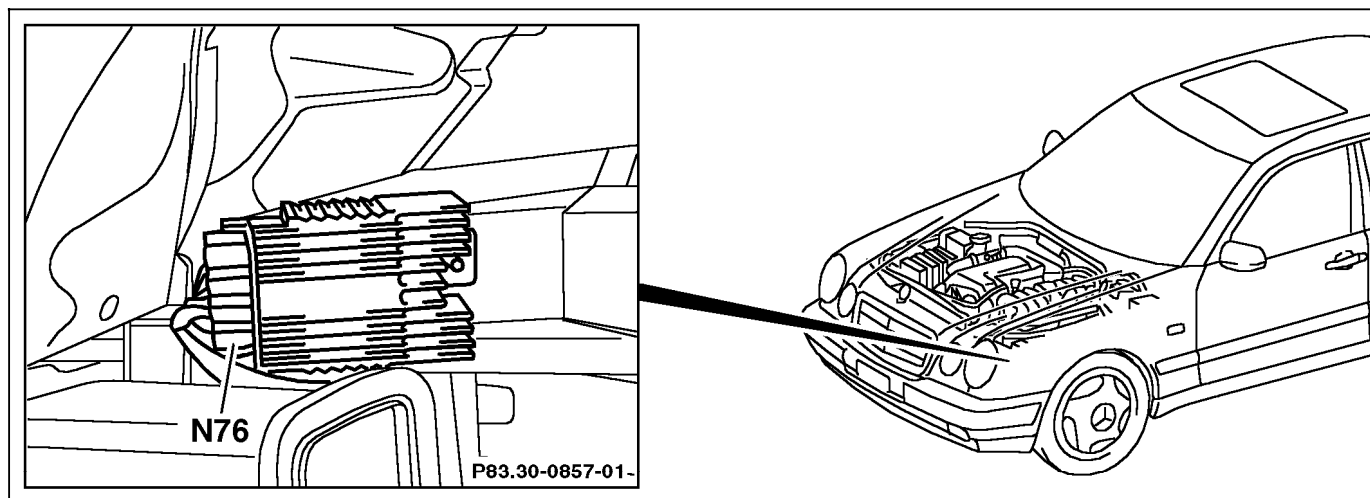

P83.40-0446-04

Figure 7

M4/3 Engine/climate control electric cooling fan

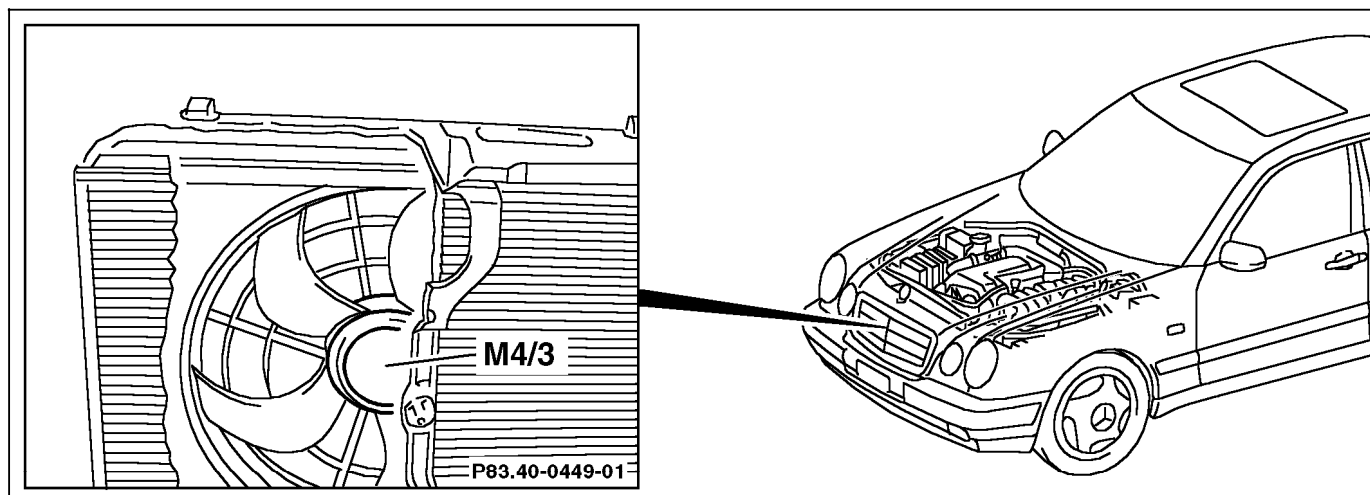

P83.40-0448-04

Electrical Test Program – Component Locations

Component locations in engine compartment

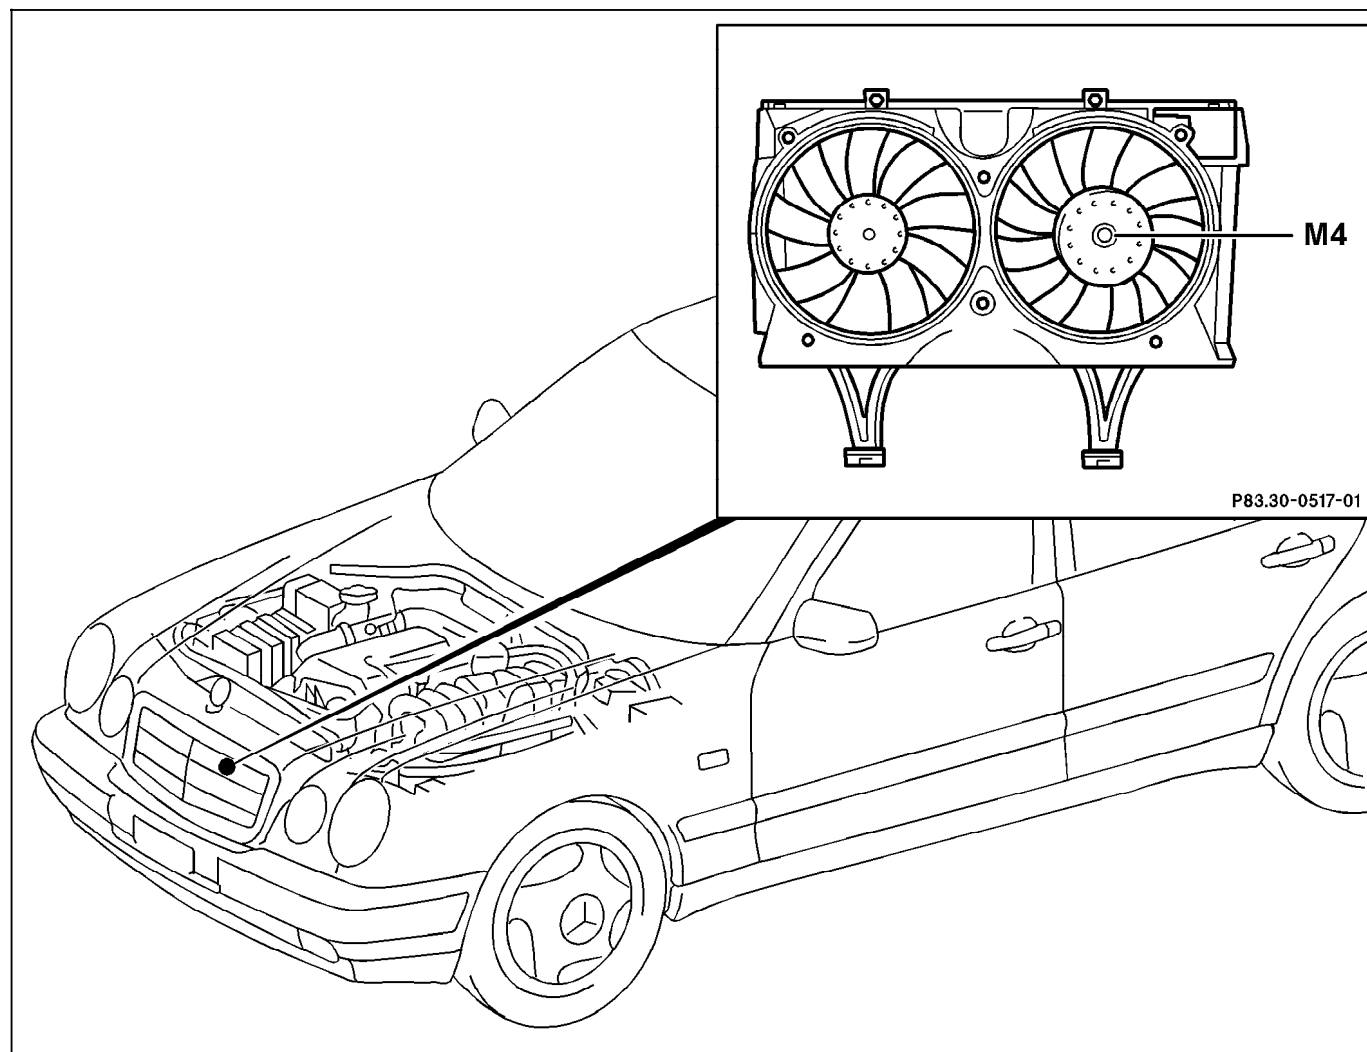


Figure 8


M4 Auxiliary fan

Electrical Test Program – Component Locations

Component locations in engine compartment

Figure 9


M13 Coolant circulation pump

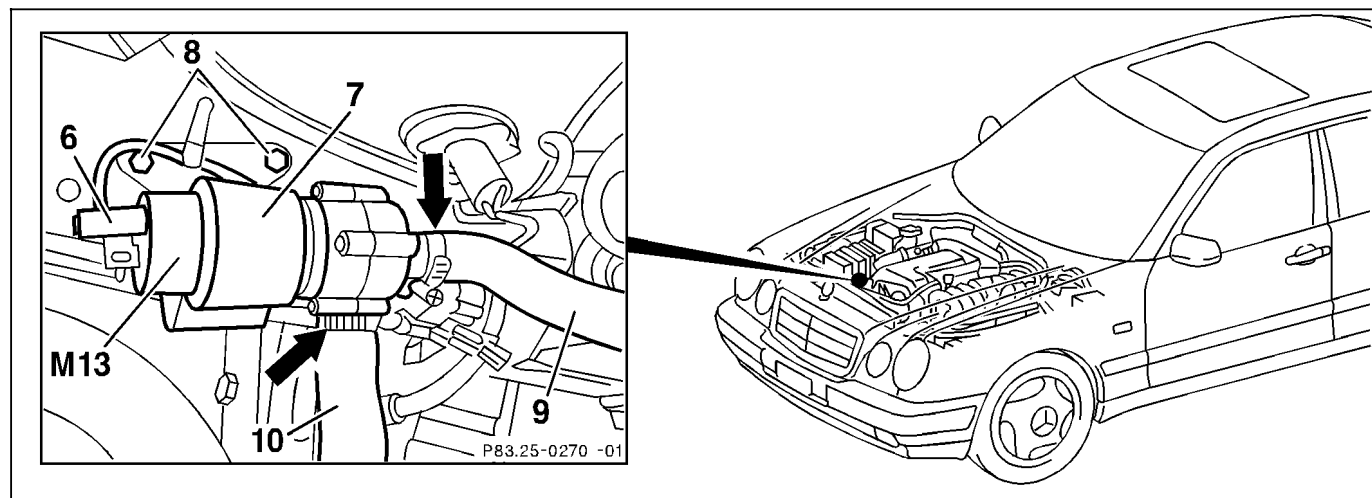

P83.25-0268-04

Figure 10

B31 Emissions sensor (up to 5/98)

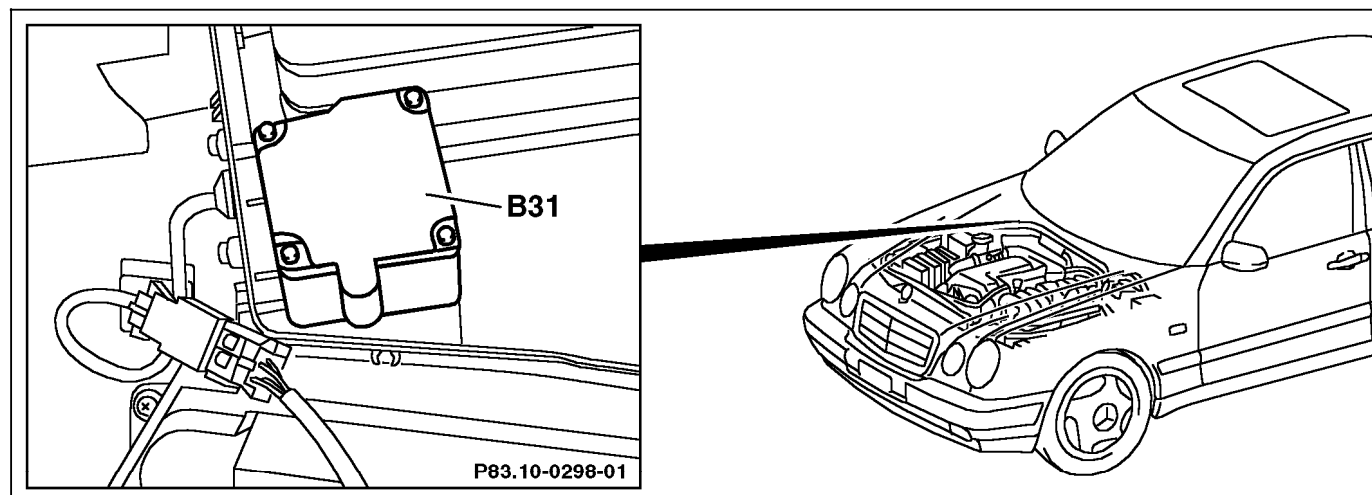


P83.10-0297-04

Electrical Test Program – Component Locations

Component locations in engine compartment

Figure 11

B31 Emissions sensor (as of 6/98)

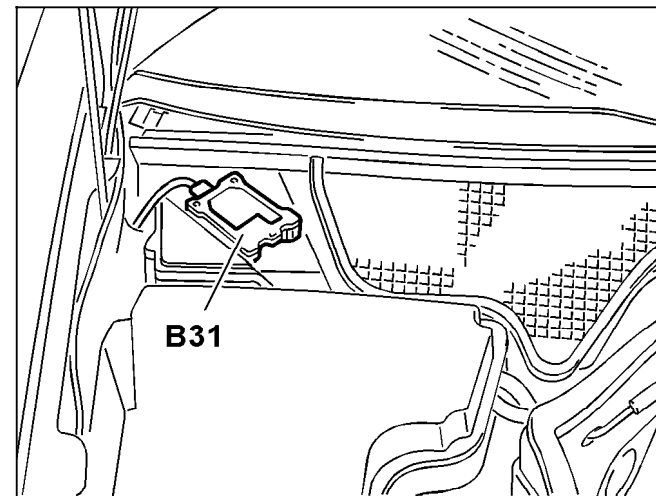

P83.40-2034-01