

Electrical Test Program – Component Locations

Electrical Components in Passenger Compartment

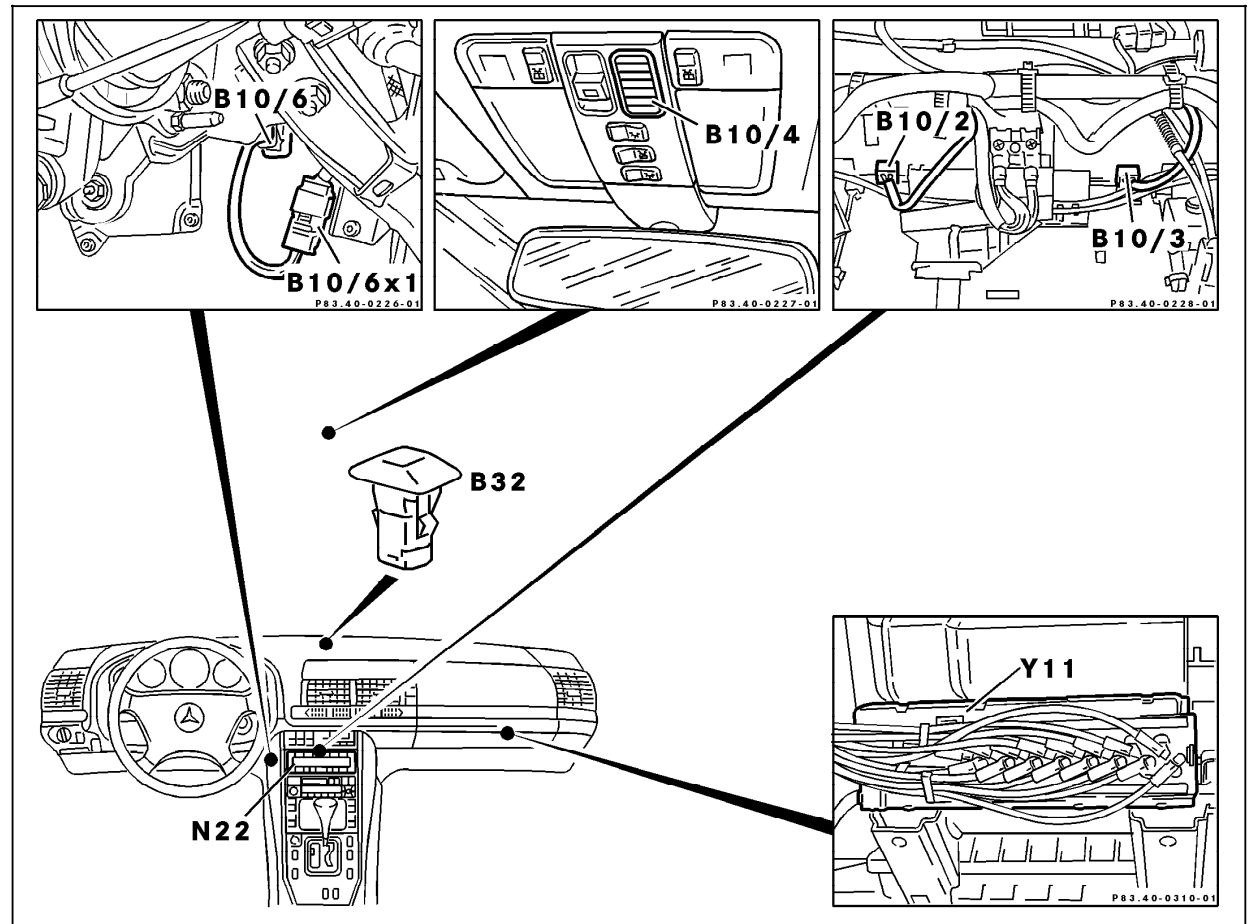


Figure 1

- B10/2 Left heater core temperature sensor
- B10/3 Right heater core temperature sensor
- B10/4 In-car temperature sensor with aspirator
- B10/6 Evaporator temperature sensor
- B10/6x1 Evaporator temperature sensor connector
- B32 Sun sensor
- N22 A/C pushbutton control module
- Y11 Valve block (15 connections, multiplex)

P83.40-0305-06

Electrical Test Program – Component Locations

Electrical Components in Engine Compartment

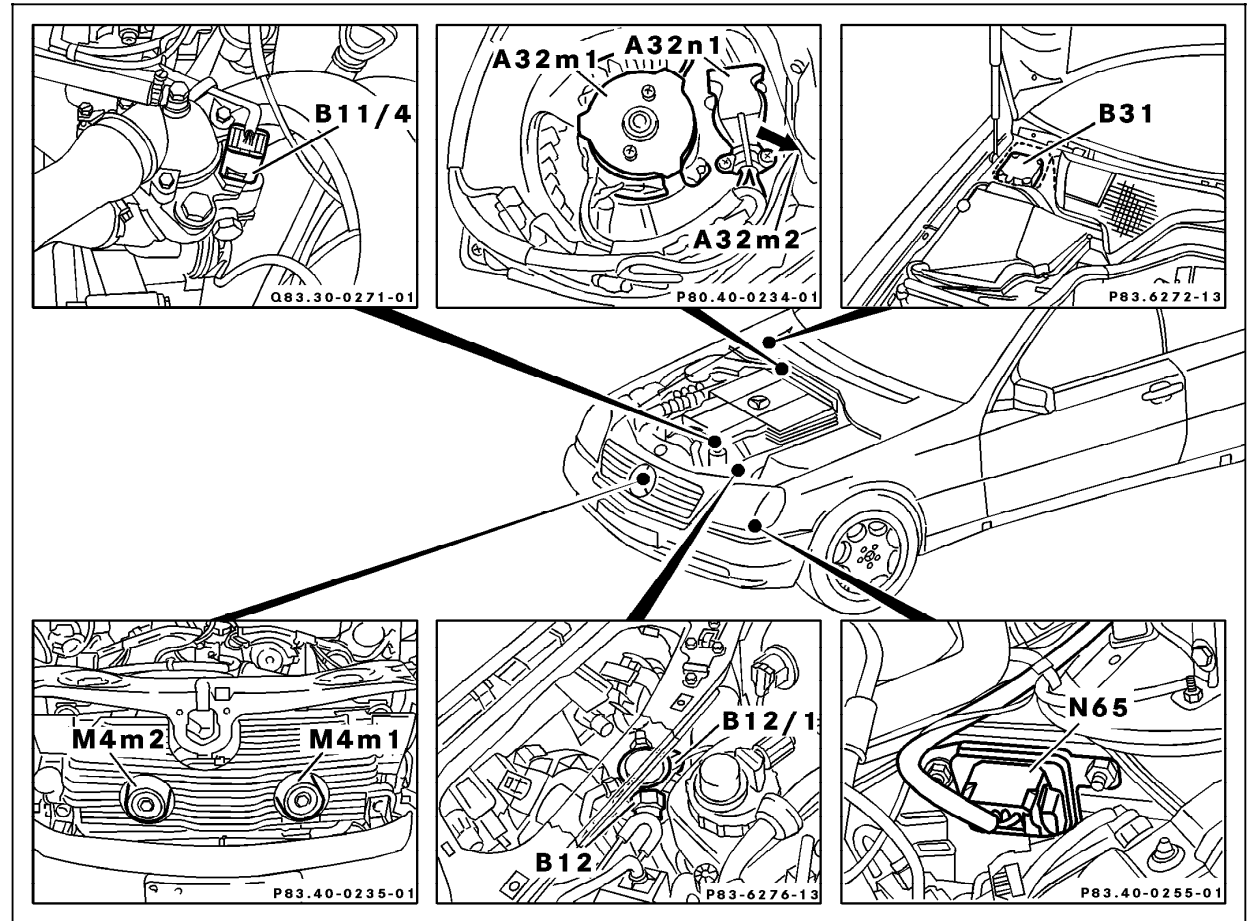


Figure 2

- A32m1 Blower motor
- A32m2 Activated charcoal filter actuator
- A32n1 Blower regulator
- B11/4 ECT sensor
- B12 Refrigerant pressure sensor
- B12/1 Refrigerant temperature sensor
- B31 Emissions sensor
- M4m1 Left auxiliary fan
- M4m2 Right auxiliary fan
- N65/1 AIR control module

P83.40-0306-06