Component locations in passenger compartment

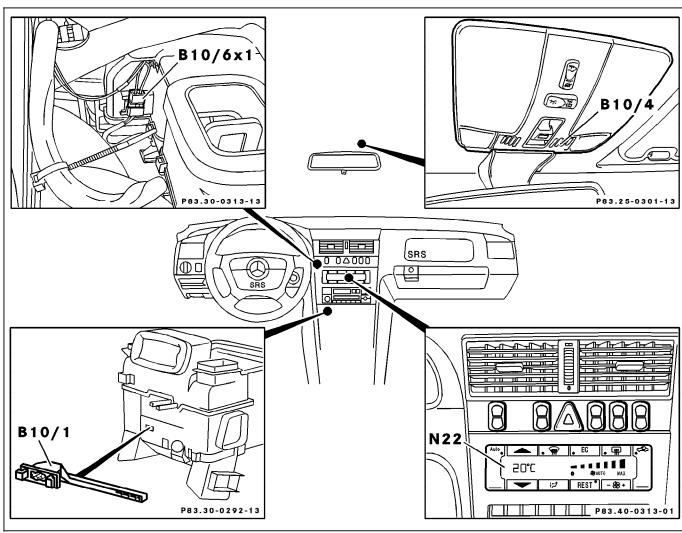


Figure 1

B10/1 Heater core temperature sensor
 B10/4 In-car temperature sensor with aspirator
 B10/6x1 Evaporator temperature sensor

connector


N22 A/C pushbutton control module

P83.40-0325-06

Component locations in engine compartment
Model 210 shown

Figure 2

B11/4 CT sensor

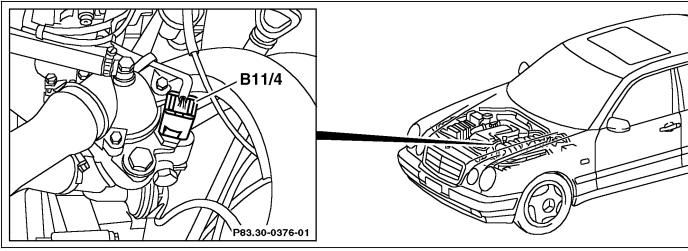

P83.40-0457-04

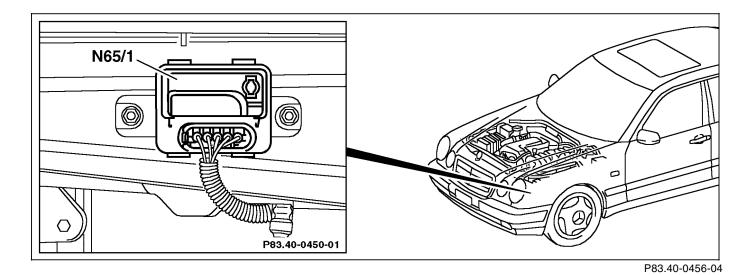


Figure 3


N65/1 AIR control module

3.7 A/C

Component locations in engine compartment
Model 210 shown

Figure 4

N76 Engine/climate control electric cooling fan control module

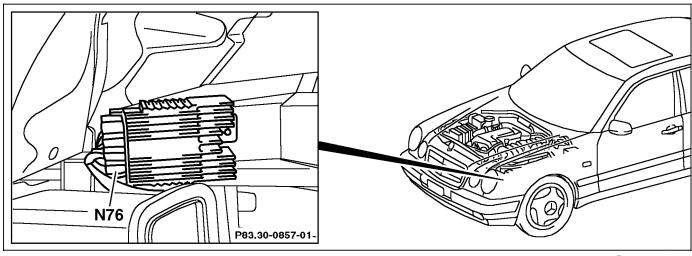

P83.40-0446-04

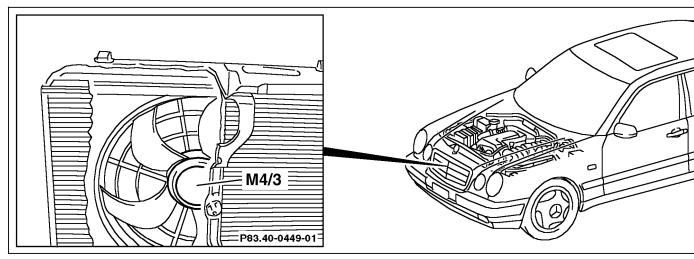


Figure 5

M4/3 Engine/climate control electric cooling fan

P83.40-0448-04

Component locations in engine compartment
Model 210 shown

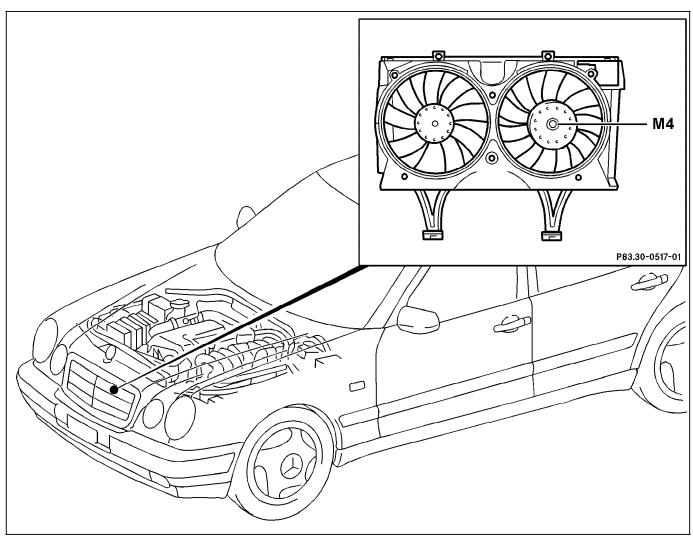


Figure 6


M4 Auxiliary fan

P83.30-0506-06

Component locations in engine compartment
Model 210 shown

Figure 7

M13 Coolant circulation pump

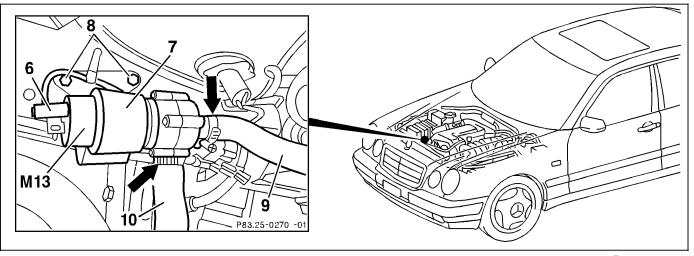

P83.25-0268-04