


Version Coding

Reading Version Code

1. Turn ignition **ON**.
2. Press **REST** > 6 secs, press  + to set display to "42".
3. The the version code will appear in the display window.
If the version code is not correct for the vehicle, the version code must be reprogrammed (see table).
4. To end press **REST**.

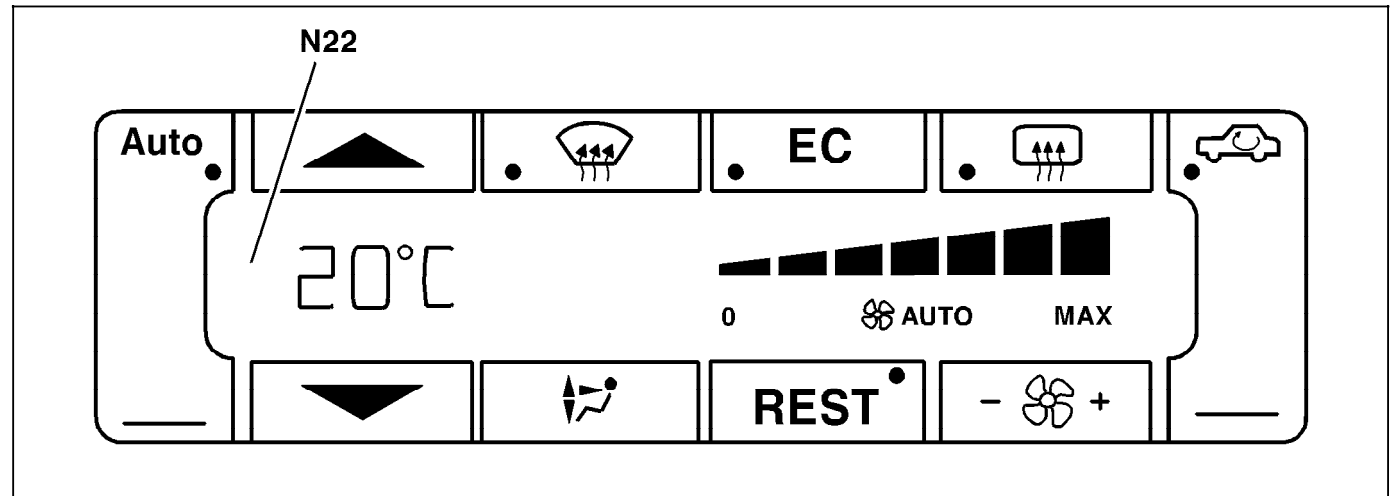




Figure 1


P83.40-2028-04

Diagnosis – Reading and Programming Version Code

Programming Version Code

1. Ignition: **OFF**
2. Press **REST** and hold depressed.
3. Ignition: **ON**
4. Release **REST**.
 - LED **REST** flashes at one cycle per minute.
 - Display shows $\square\square$ p.
 - All other LED's are "**OFF**".
 - The function of the A/C pushbutton control module is as in position **0**.
5. Set version code by pressing  (see table). The first activation of  must occur within 30 seconds after ignition "ON" (thereafter, the programming mode is blocked).
6. Enter version code by pressing **EC**. A previously stored version code is thereby erased.
7. Turn ignition: **OFF** to end version code programming.

Version Coding

1. Numerical Value		Preliminary setting
000	000	New, not yet programmed control module.
00	0	Delivery status, model 202
03	3	Serial interface K1 and K2, model 129