

Diagnosis – Diagnostic Trouble Code (DTC) Memory



- The A/C pushbutton control module (N22) has DTC memory and data output. The diagnostic trouble codes and data are displayed via the temperature display window. The stored DTC's will remain in memory even with the vehicle battery disconnected.
- The DTC memory differentiates between current and intermittent faults.
- All DTC's can also be read with the Hand-Held Tester (HHT).

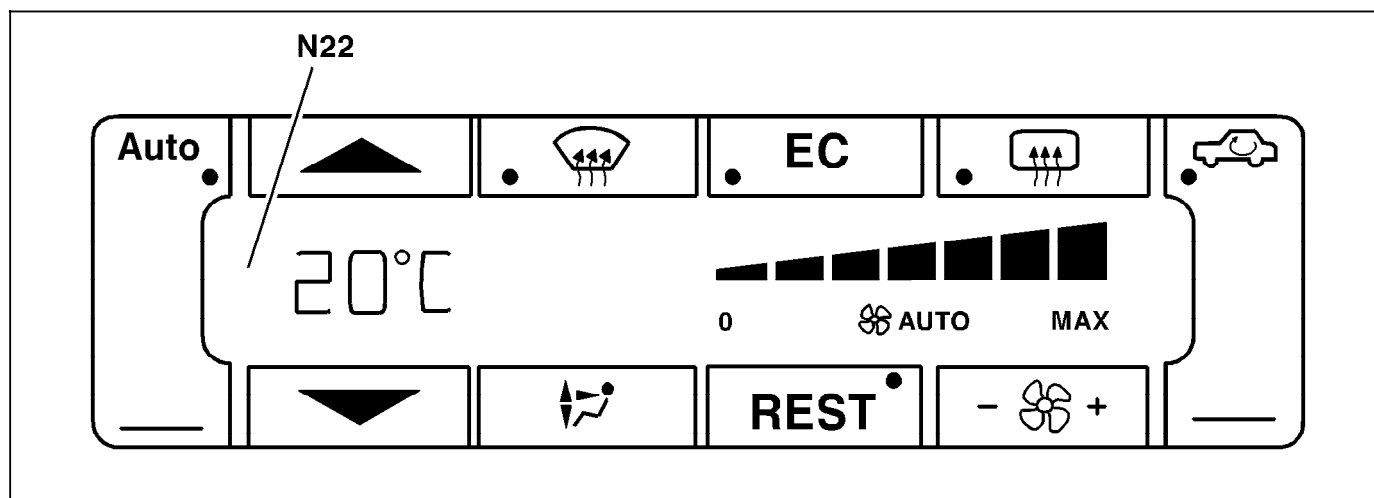






Figure 1

P83.40-2028-04

Diagnosis – Diagnostic Trouble Code (DTC) Memory

Preparations for DTC Readout

1. Review 11, 12, 14, 15, 20, 21, 22, 31, 32, 41
2. Ignition: **ON**
3. Temperature selector "L0".
4. Within 20 seconds press **REST** and  simultaneously for more than 5 seconds.
5. The LED in  flashes and the display reads "di R".
6. Press **AUTO** repeatedly until all DTC's are displayed. Record each DTC as it is displayed. The current faults (refer to table) are displayed first, next, the intermittent failures (e.g. 45 °5) are displayed in the display window next to the  symbol. End ° will appear after the last DTC is displayed.
Press **AUTO** again, dEl (delete, erase) will be displayed.


7. To erase: Press  and simultaneously for more than 5 seconds and the display shows "-- -".
To cancel erase: By pressing **AUTO** the current faults will appear again.
8. Turn ignition **OFF** to end test.




Due to instrument cluster (IC) serial interface K1, K2; DTC's may be stored in IC memory, therefore readout and erase DTC memory.

Diagnosis – Diagnostic Trouble Code (DTC) Memory

Special Tools

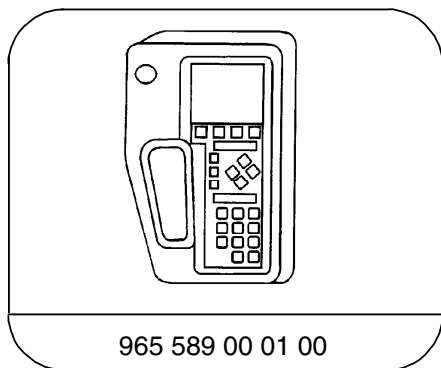


Hand-Held-Tester

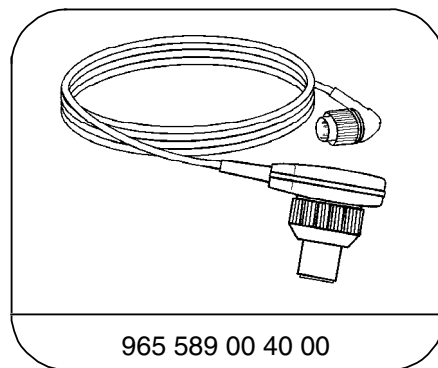


Test cable

Diagnosis – Diagnostic Trouble Code (DTC) Memory

Diagnostic trouble code (DTC)	Possible cause	Test step/Remedy ¹⁾
N22 		
-	No malfunction in system	–
226 B1226	In-car temperature sensor (B10/4)	23⇒ 4.0
227 B1227	Outside temperature indicator temperature sensor (B14)	23⇒ 10.0
228 B1228	Left heater core temperature sensor (B10/2)	23⇒ 7.0
230 B1230	Evaporator temperature sensor (B10/6)	23⇒ 5.0
231 B1231	ECT sensor (B11/4)	23⇒ 10.0
232 B1232	Refrigerant pressure sensor (B12)	23⇒ 8.0
233 B1233	Refrigerant temperature sensor (B12/1)	23⇒ 6.0
241 B1241	Refrigerant fill	23⇒ 6.0, 8.0
416 B1416	Coolant circulation pump (M13)	23⇒ 18.0
417 B1417	Automatic A/C monovalve (Y19)	23⇒ 19.0

¹⁾ Observe Preparation for Test, see 22.

Diagnosis – Diagnostic Trouble Code (DTC) Memory

Diagnostic trouble code (DTC)		Possible cause	Test step/Remedy ¹⁾
N22 			
419	B1419	Electromagnetic clutch (A9k1)	23⇒ 21.0
420	B1420	Idle speed increase	-
421	B1421	AIR control module (N65/1)	23⇒ 16.0
422	B1422	Serial interface K1	23⇒ 10.0
423	B1423	Switchover valve block (15 connection multiplex) (Y11)	23⇒ 22.0
459	B1459	Serial interface K2	23⇒ 23.0

¹⁾ Observe Preparation for Test, see 22.