

1.1 Base Module (BM)


Models 124.34/036, 129.067/076, 140 (EDS, LH-SFI, ME-SFI)

Electrical Test Program – Component Locations

Component Locations – Part 1

Figure 1

- N16/1 Base module (BM)
- F1 Fused voltage supply for Stop lamp switch (S9/1), ABS (N30) or ASR (N30/1) control module, ASD control module (N30/2)
- F2 Fused voltage supply for:
Engines 104, 119
“CHECK ENGINE“ MIL (A1e26), LH-SFI control module (N3/1), DM (N59) (M.Y. 1992 Calif. engines), FP relay module (K27).
Engines 104, 119 (→ approx. 08/92)
Ignition control module (N1/3), AIR relay module (K17), Transmission upshift delay relay module (K29), Upshift delay solenoid valve (Y3/2), EGR switchover valve (Y27), Adjustable camshaft timing solenoid (Y49), Left adjustable camshaft timing solenoid (Y49/1), Right adjustable camshaft timing solenoid (Y49/2), Purge control valve (Y58/1), Injectors (Y62).
Engines 104, 119 (approx. 09/92 →)
Ignition control module (N1/3, 06/91 →), Injectors (Y62).
Engine 120
“CHECK ENGINE“ MIL (A1e26), Right ignition control module (N1/5, 06/91 →), Right LH-SFI control module (N3/3), DM (N59, M.Y. 1992), AIR relay module (K17), FP relay modules (K27/1 and K27/2), Upshift delay solenoid valve (Y3/2), Right EGR switchover valve (Y27/3), Right adjustable camshaft timing solenoid (Y49/2), Right purge control valve (Y58/3), Right injectors (Y64).
Engine 603
EDS control module (N39), EGR switchover valve (Y27), EGR valve vacuum transducer (Y31/1), Boost pressure control vacuum transducer (Y31/4), Boost pressure cut-out switchover valve (Y31/6).
- a Location of N16/1 in models 129, 140
- b Location of N16/1 in model 124

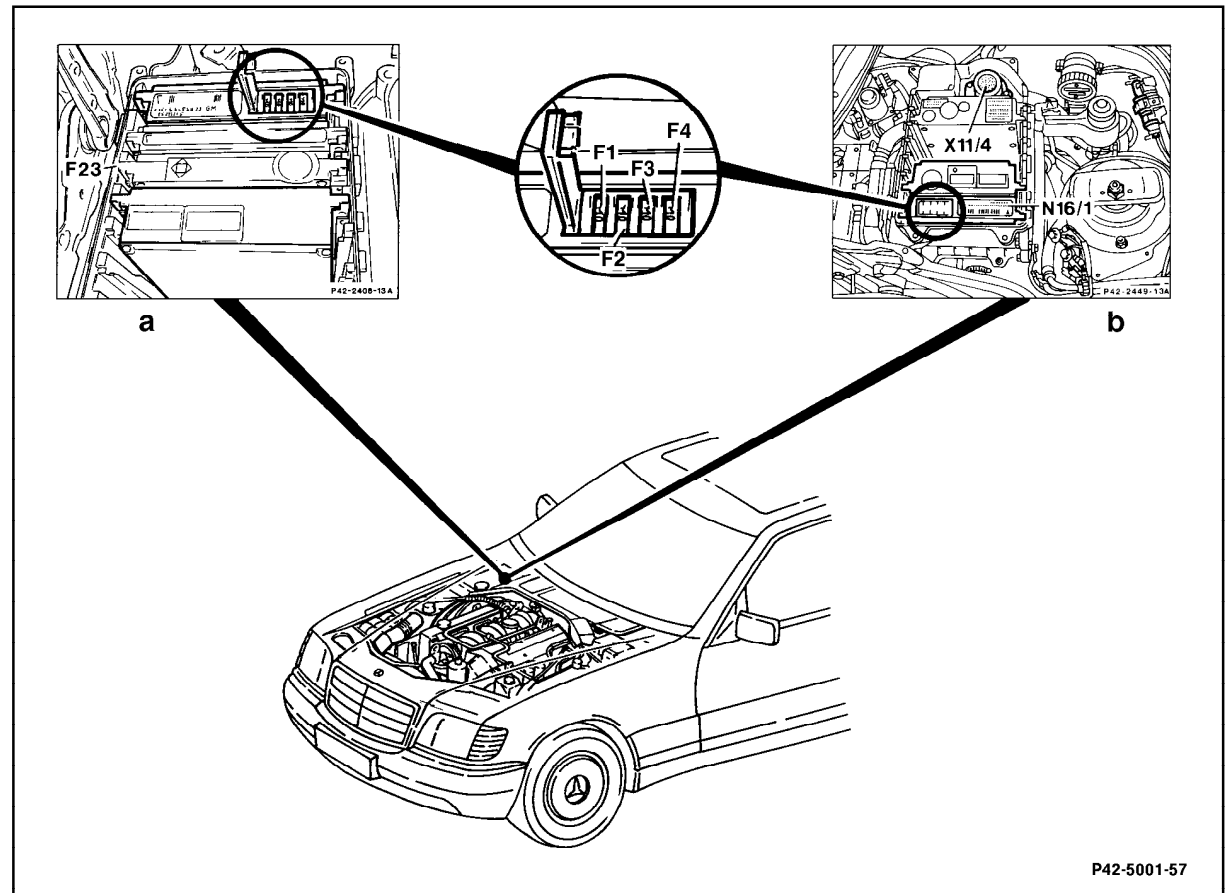

P42-5001-57

1.1 Base Module (BM)

Models 124.34/036, 129.067/076, 140 (EDS, LH-SFI, ME-SFI)

Electrical Test Program – Component Locations

Component Locations – Part 2

Figure 2

- N16/1 Base module (BM)
 - F3 Fused voltage supply for SPS (N49/1), ADS (N51), Transmission control module (TCM) (5-speed automatic) (N15/1)
 - F4 Fused voltage supply for:
 - Engines 104, 119 (approx. 09/92 →)**
 - AIR relay module (K17), Fuel pumps relay module (K27), Transmission upshift delay relay module (K29), Upshift delay solenoid valve (Y3/2), EGR switchover valve (Y27), Adjustable camshaft timing solenoid (Y49), Left adjustable camshaft timing solenoid (Y49/1), Right adjustable camshaft timing solenoid (Y49/2), Purge control valve (Y58/1).
 - Engine 120**
 - Left ignition control module (N1/4, 06/91 →), Left LH-SFI control module (N3/2), Fuel pumps relay modules (K27/1 and K27/2), Left EGR switchover valve (Y27/2), Left adjustable camshaft timing solenoid (Y49/1), Left purge control valve (Y58/2), Left injectors (Y63).
- a Location of N16/1 in models 129, 140
- b Location of N16/1 in model 124

